

## 4ID3 - IoT Devices and Networks

Lab 2

Communicating Sensor Data over a Bluetooth Network

Adam Sokacz, Ishwar Singh, and Salman Bawa

Sponsored by *Future Skills Center, Canada* and *McMaster W Booth SEPT*

Group Number:

Name, Student Number:

Name, Student Number:

Name, Student Number:

Submission Date:

**WBOOTH** SCHOOL OF ENGINEERING  
PRACTICE AND TECHNOLOGY

McMaster-Mohawk Bachelor of Technology Partnership



## Objective

In this lab, sensor data will be read, encoded, and transmitted to a nearby PC using the IoT access technology Bluetooth Classic. This data will then be parsed and routed to both a public MQTT server for use in NodeRED, and a locally run MongoDB database for data storage and analysis.

## Contents

Objective .....	2
Feedback .....	3
Additional Resources .....	3
Pre-Lab Questions.....	4
Post-Lab Questions .....	4
Exercise A Results: .....	6
<i>Optional:</i> Exercise B Results:.....	6
Setting up the Workspace.....	7
Reading Sensor Data.....	14
Transmitting Over Bluetooth .....	25
Viewing a Bluetooth Serial Device .....	31
Exercise A.....	36
Parsing Data using Python .....	37
Installing Python .....	37
Installing VSCode.....	38
MQTT Routing .....	42
Verify MQTT .....	48
Exercise B .....	49
Exiting the Python Application.....	49
<i>Optional:</i> Connecting to a Database .....	51
Exercise C .....	59
Pushing Changes to GitHub.....	60

## Feedback

Q1 - What would you rate the difficulty of this lab?

(1 = *easy*, 5 = *difficult*)

1                    2                    3                    4                    5

Comments about the difficulty of the lab:

Q2 - Did you have enough time to complete the lab within the designated lab time?

**YES**                    **NO**

Q3 - How easy were the lab instructions to understand?

(1 = *easy*, 5 = *unclear*)

1                    2                    3                    4                    5

List any unclear steps:

Q4 - Could you see yourself using the skills learned in this lab to tackle future engineering challenges?

(1 = *no*, 5 = *yes*)

1                    2                    3                    4                    5

## Additional Resources

**Lab GitHub Repo** ( <https://github.com/sokacza/4ID3> )

Arduino Programming Refresher ( [https://youtu.be/CbJHL\\_P5RJ8](https://youtu.be/CbJHL_P5RJ8) )

Mosquitto MQTT Broker Tutorial ( <https://youtu.be/DH-VSAACtBk> )

NodeRED Fundamentals Tutorial ( <https://youtu.be/3AR432bguOY> )

ESP32 Overview ( <https://youtu.be/UuxBfKA3U5M> )

## Pre-Lab Questions

**Q1** - In your own words, describe the master-slave messaging pattern. What role does the master device play? What role do the slave devices play? How many slave devices can be coordinated by a single master device? Include a sketch in your explanation.

(Suggested: Short paragraph, 5 points)

**Q2** - Compare and contrast Bluetooth Classic vs BLE in a table. What are advantages and drawbacks of each technology?

(Suggested: Table, 3 points)

**Q3** - What layer of the OSI model does Bluetooth technology reside in?

(Suggested: 1 sentence, 1 point)

## Post-Lab Questions

**Q1** - What network topology would best describe the IoT network built in this lab? Explain with a diagram. Include labels for each node and connection in the network.

(Suggested: Diagram, 5 points)

**Q2** - If the microcontroller is transmitting data to the PC, but the Python script is not running, how does this impact what data is accessible through MQTT?

(Suggested: 3 sentences, 2 points)

**Q3** - What is the theoretical range of Bluetooth Classic? How might this impact its use in IoT networks? Explain using an example.

(Suggested: 3 sentences, 2 points)

**Q4** - What is a relational database? What is a non-relational database? How do they differ? What type of database is MongoDB?

(Suggested: Short paragraph, 4 points)

**Q5** - Using the PySerial documentation and the lab instructions, write a short Python script that reads serial data on a hypothetical COM10 Bluetooth receive port on your Windows PC and prints it to the terminal.

<https://pyserial.readthedocs.io/en/latest/shortintro.html>

(Suggested: Code, 5 points)

**Q6** - Before sending the sensor values to the PC, they were encoded as a JSON string to make the data easy to parse using Python.

What is JSON?

What is a data structure in programming?

What is a Python Dictionary data structure?

How was the json.loads() function used to convert a JSON string to a Python Dictionary?

*Lab 2 - Communicating Sensor Data over a Bluetooth Network*

*(Suggested: 4 sentences, 4 points)*

**Q7 - Write a brief LinkedIn post about 4 key learning takeaways from this lab.**

*(Suggested: Paragraph, 4 points)*

*Lab 2 - Communicating Sensor Data over a Bluetooth Network*

Exercise A Results:


Exercise B Results:

*Optional:* Exercise C Results:

## Setting up the Workspace

Each lab, we will be creating a new folder in the local git repository that was created in the provided pre-lab to store and document technologies that you have worked on.


Navigate to your local git repository for this course.

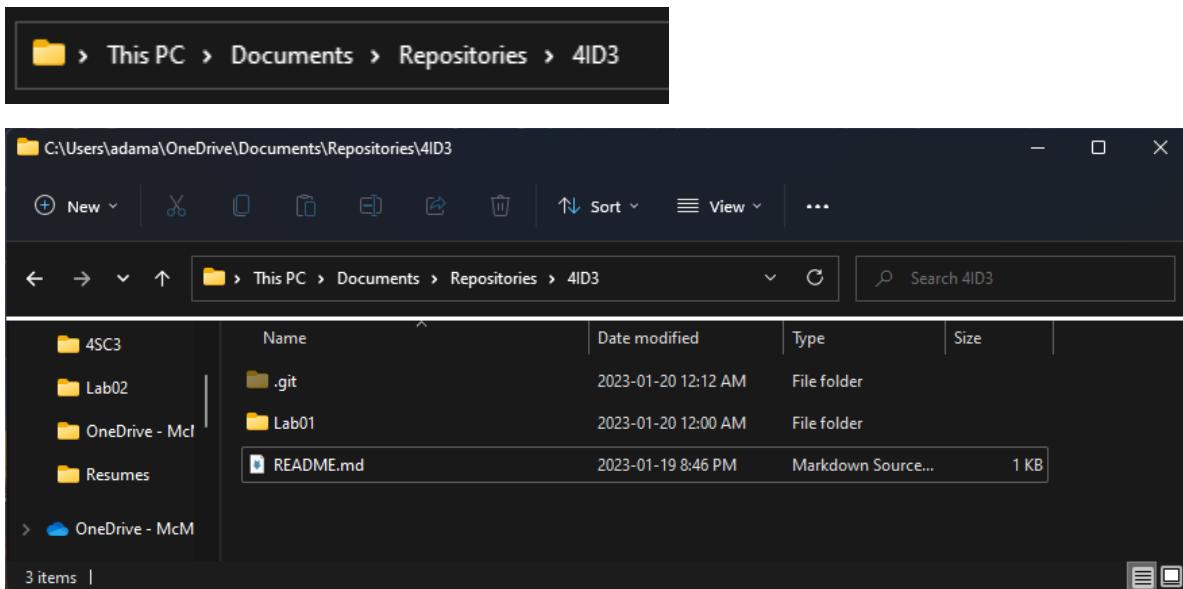

Create a new folder named **Lab02**. Navigate inside this folder.




Create a new text file in the folder.

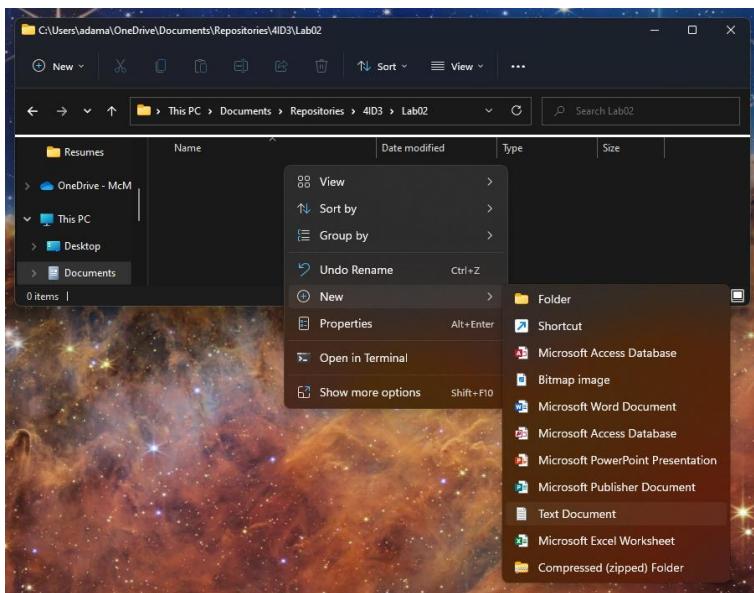


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

Press **File > Save as.**

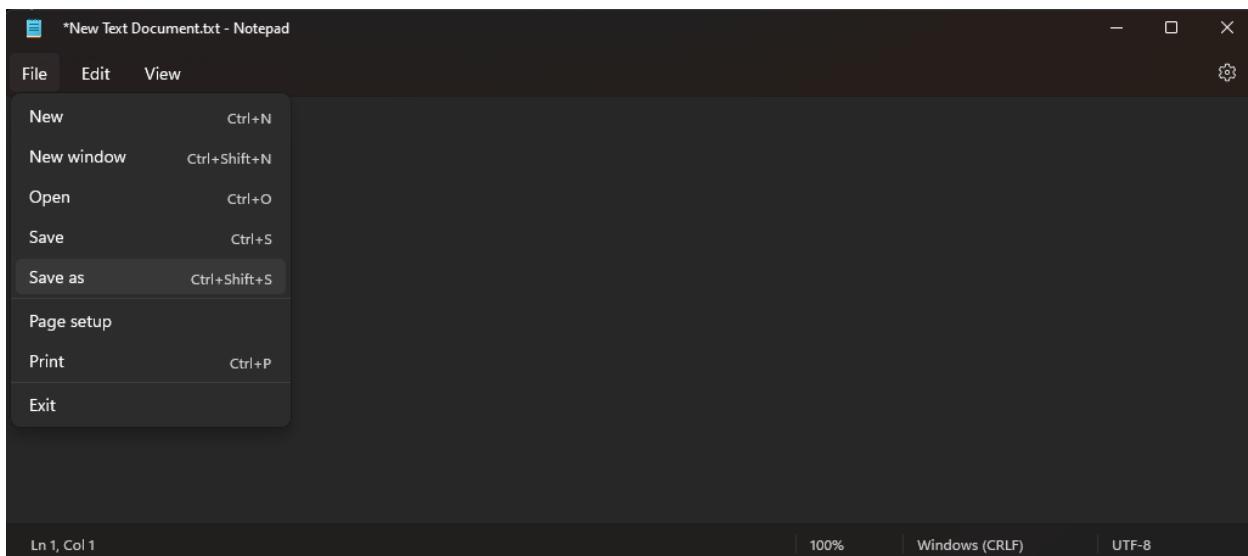


Save it as **Lab02.md**. Ensure that the **Save as type** is set to **All files (\*.\*)**.

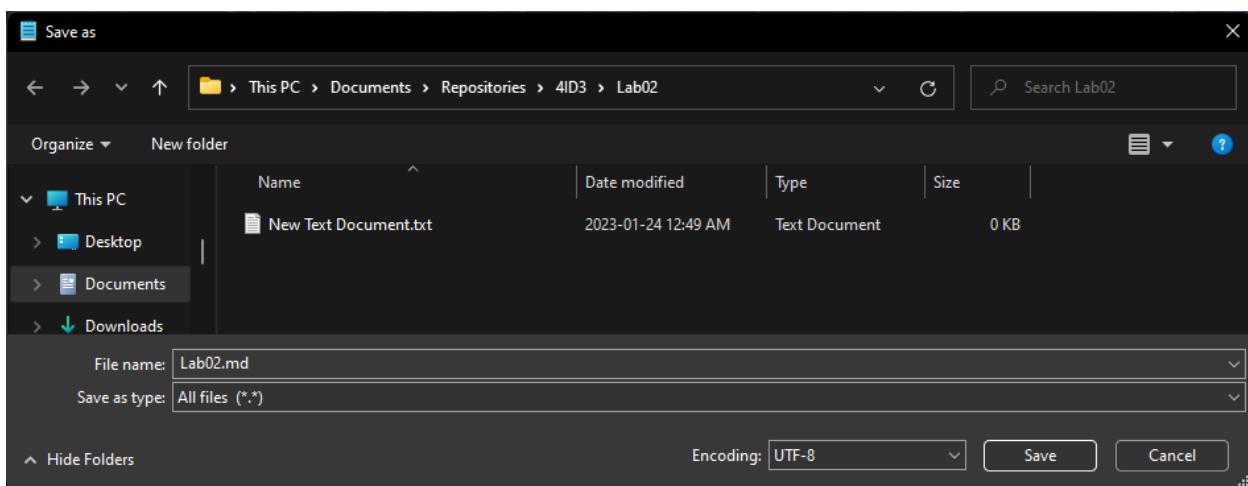


Now, you should have two files, a **text file** and a **markdown file**. Delete the text file.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

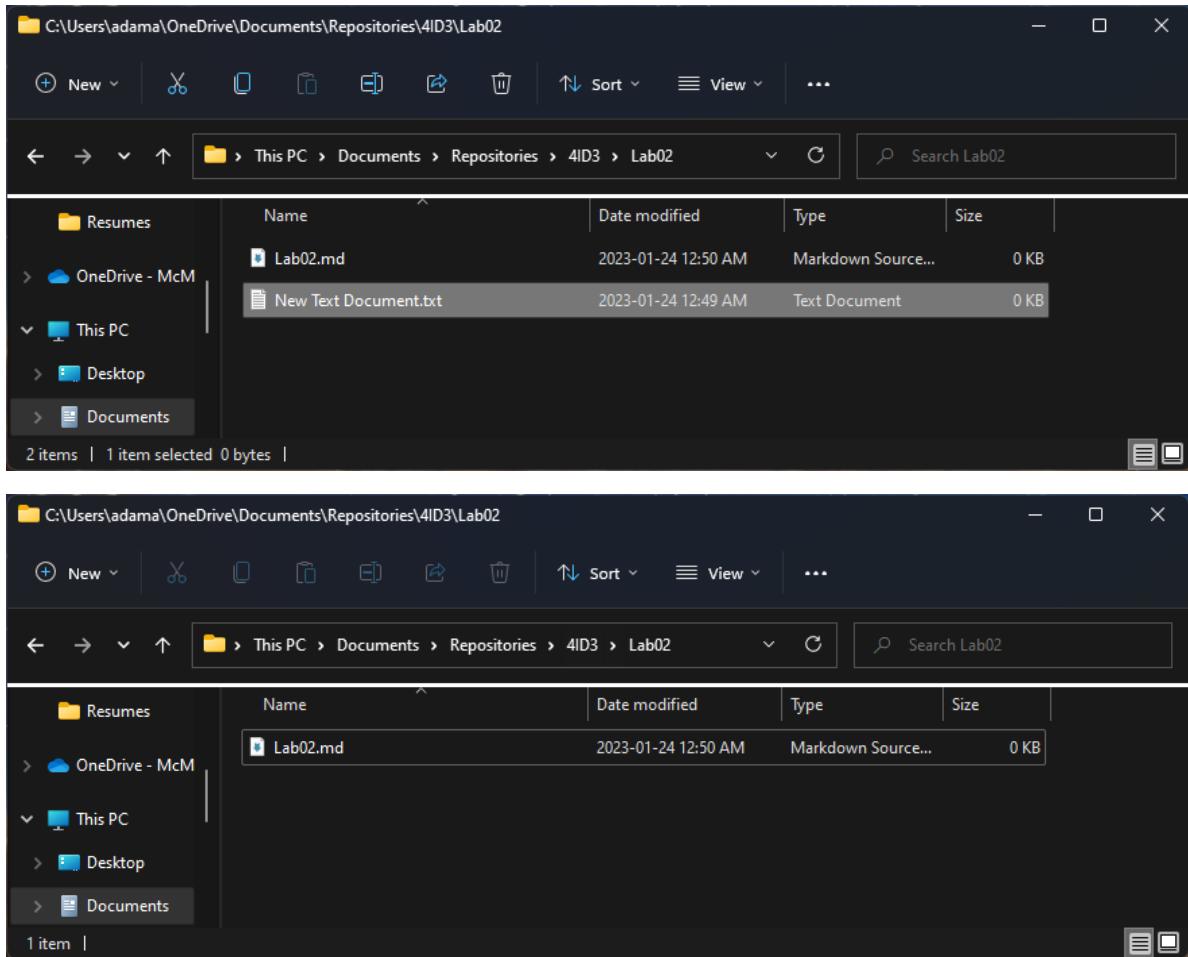


To open the markdown file, **right-click** and select **Open with**. Choose **Notepad**.

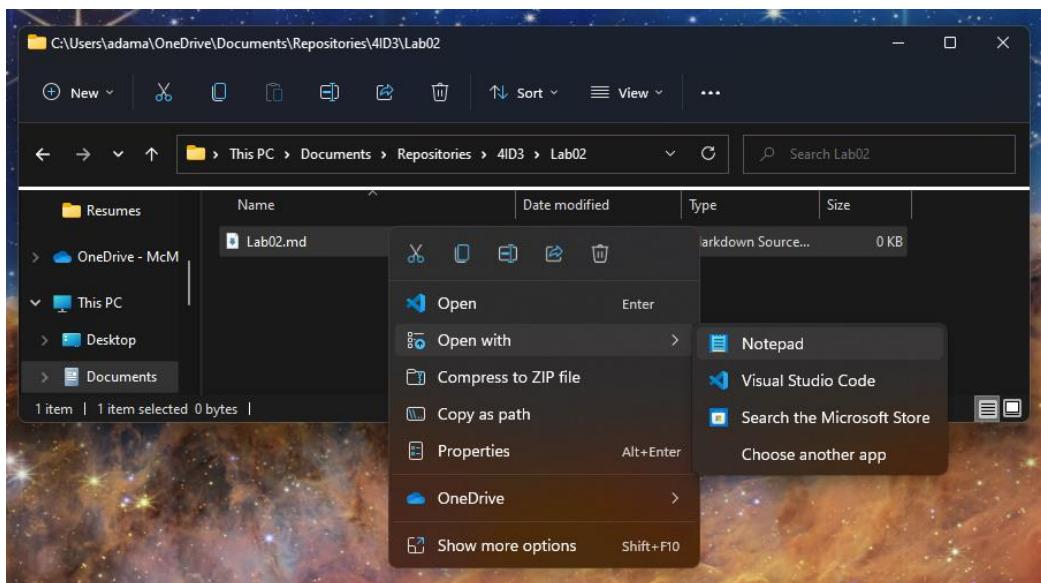

Writing markdown documents to explain your code is very similar to HTML. A reference guide can be found here:

<https://docs.github.com/en/get-started/writing-on-github/getting-started-with-writing-and-formatting-on-github/basic-writing-and-formatting-syntax>

Write the following text in the markdown file and save it.

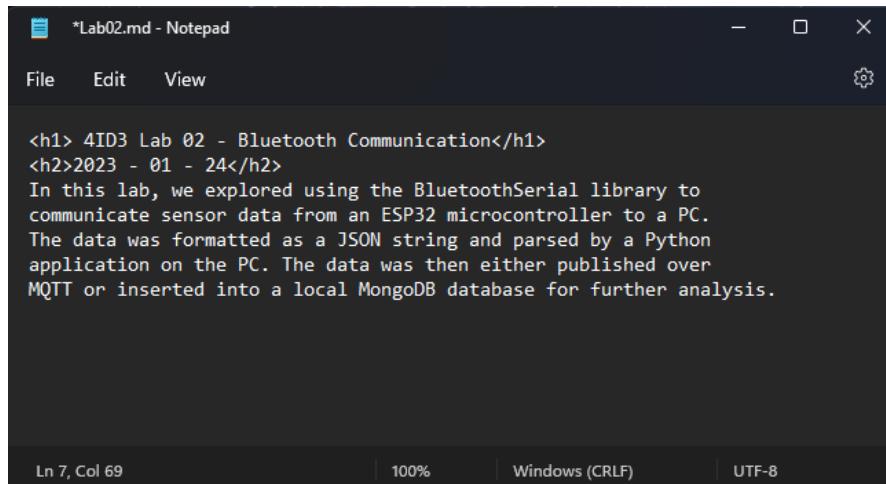

```
*Lab02.md - Notepad
File Edit View

<h1> 4ID3 Lab 02 - Bluetooth Communication</h1>
<h2>2023 - 01 - 24</h2>
In this lab, we explored using the BluetoothSerial library to
communicate sensor data from an ESP32 microcontroller to a PC.
The data was formatted as a JSON string and parsed by a Python
application on the PC. The data was then either published over
MQTT or inserted into a local MongoDB database for further analysis.

Ln 7, Col 69 | 100% | Windows (CRLF) | UTF-8
```

*<h1> 4ID3 Lab 02 - Bluetooth Communication</h1>*

*<h2>2023 - 01 - 24</h2>*


*In this lab, we explored using the BluetoothSerial library to  
communicate sensor data from an ESP32 microcontroller to a PC.*

*The data was formatted as a JSON string and parsed by a Python  
application on the PC. The data was then either published over  
MQTT or inserted into a local MongoDB database for further analysis.*


**Save** the file.

Navigate to the **root folder** (*4ID3/*, *root main highest-level folder*) of your local repository.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

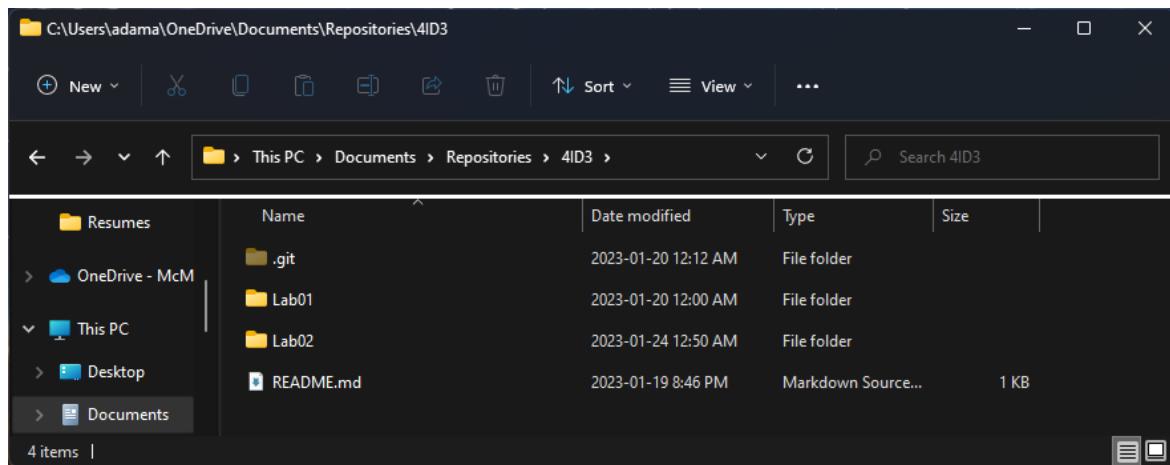


Right-click in the root folder of your local repository and launch **git bash**.

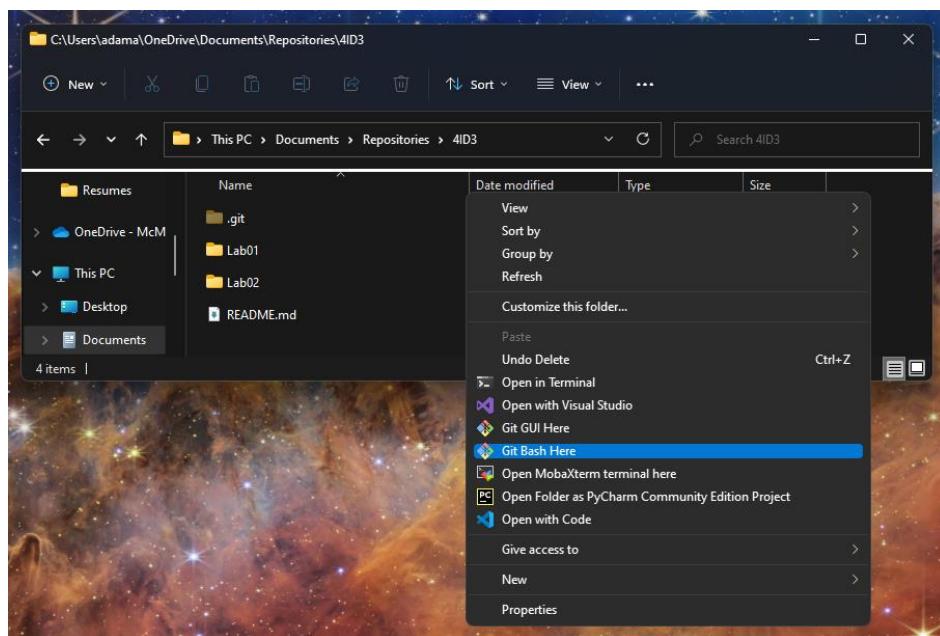

First, we need to add all the changes to the index that will be synced with GitHub. This will be done with the `git add` command.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

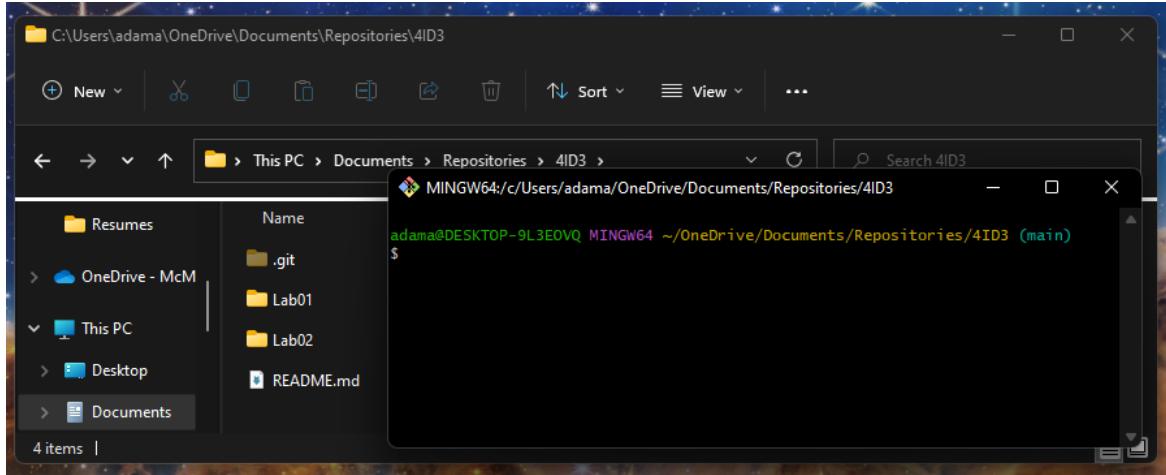


A screenshot of a Windows File Explorer window. The path is C:\Users\adama\OneDrive\Documents\Repositories\4ID3. The left sidebar shows drives and folders like Resumes, OneDrive - McM, This PC, Desktop, and Documents. The main pane lists files and folders: .git, Lab01, Lab02, and README.md. The status bar at the bottom shows the command line: MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3 (main) \$.

```
git add .
```

The period '.' is used as a shorthand for selecting all changes.

Next, when we are happy with the changes we chose to upload, we can use the commit command to package them to be synced.

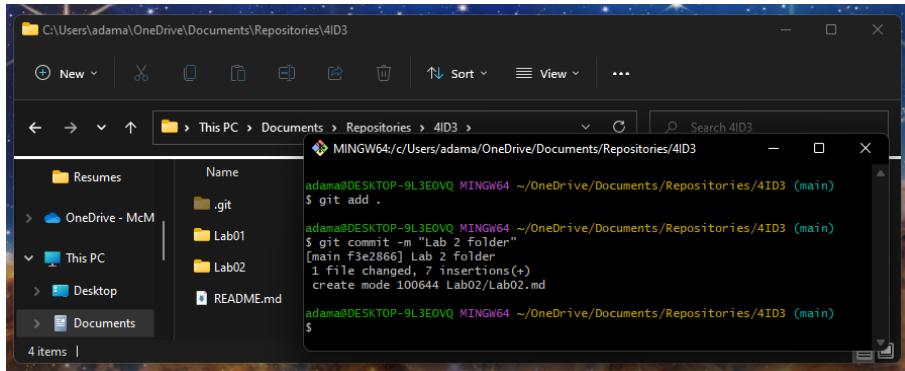

A screenshot of a Windows File Explorer window, identical to the one above, showing the same directory structure. The status bar now shows the command line: MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3 (main) \$. The terminal output on the right shows the following commands being run:


```
git add .
git commit -m "Lab 2 folder"
[main f3e2866] Lab 2 folder
 1 file changed, 7 insertions(+)
  create mode 100644 Lab02/Lab02.md
```

```
git commit -m "Lab 2 folder"
```

The '-m' flag stands for message, and it adds a message that explains what changes were made.

Lastly, to sync your local git repository with GitHub, use the git push command.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

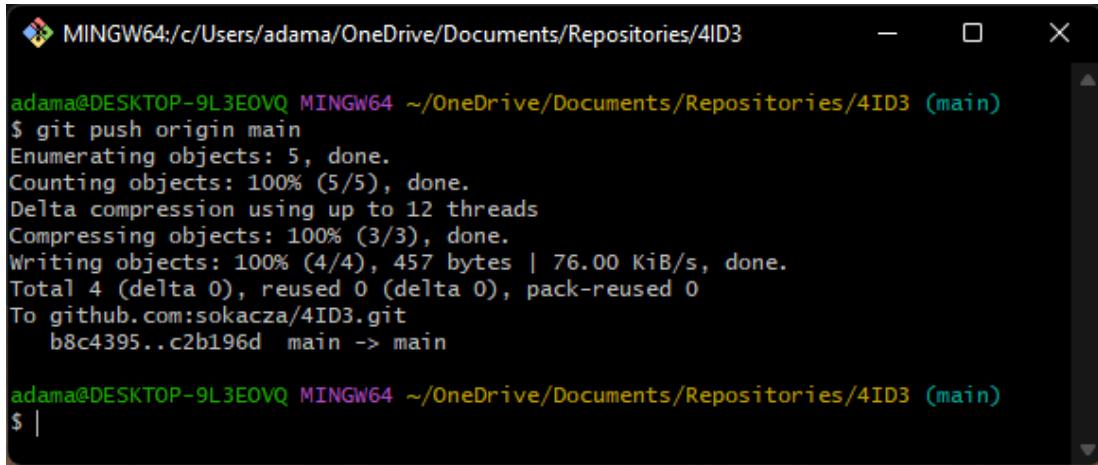


```
MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3 adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ git push origin main
Enumerating objects: 5, done.
Counting objects: 100% (5/5), done.
Delta compression using up to 12 threads
Compressing objects: 100% (3/3), done.
Writing objects: 100% (4/4), 457 bytes | 76.00 KiB/s, done.
Total 4 (delta 0), reused 0 (delta 0), pack-reused 0
To github.com:sokacza/4ID3.git
  b8c4395..c2b196d main -> main

adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ |
```

*git push origin main*

Now, log into GitHub and verify that the changes have been made.

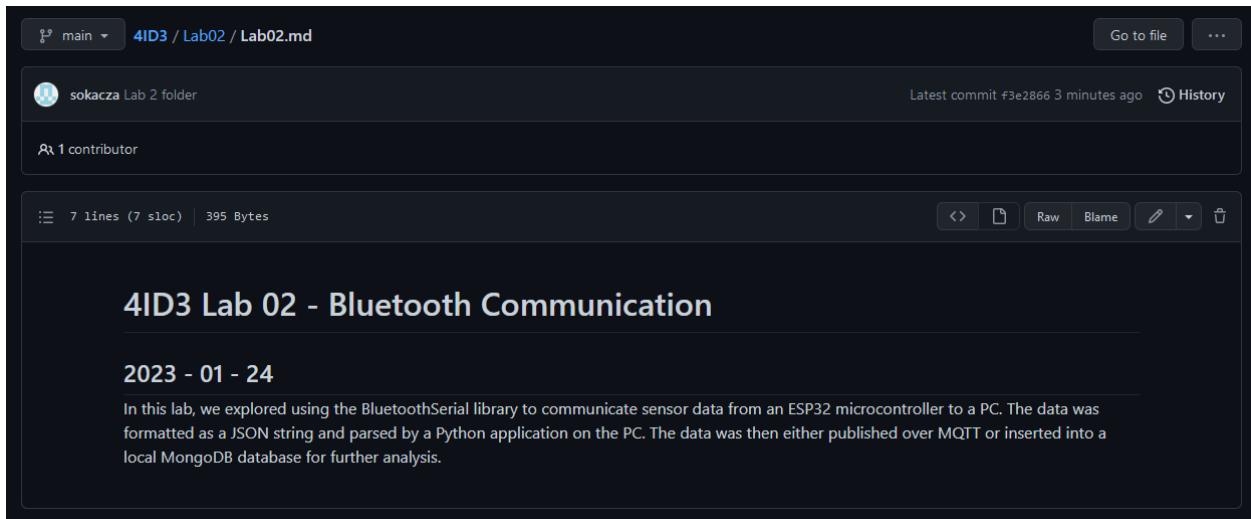

The screenshot shows a GitHub repository page for '4ID3 / Lab02 / Lab02.md'. The page displays the file content, which includes a title '4ID3 Lab 02 - Bluetooth Communication' and a date '2023 - 01 - 24'. A descriptive text block follows, stating: 'In this lab, we explored using the BluetoothSerial library to communicate sensor data from an ESP32 microcontroller to a PC. The data was formatted as a JSON string and parsed by a Python application on the PC. The data was then either published over MQTT or inserted into a local MongoDB database for further analysis.' The GitHub interface shows standard navigation and file interaction buttons.

Now, if you are collaborating and wish to sync your local git repo with the remote GitHub repo, use the `git pull` command. In this case, we see that our local git repo is already up-to-date.





```
MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3 adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ git pull origin main
From github.com:sokacza/4ID3
 * branch      main      -> FETCH_HEAD
Already up to date.

adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ |
```

## Reading Sensor Data

The goal of this section of the lab is to read data from 2 sensors and print them to the serial monitor, before we communicate to a server.

Launch the Arduino IDE and **Save as** into your lab 2 folder.

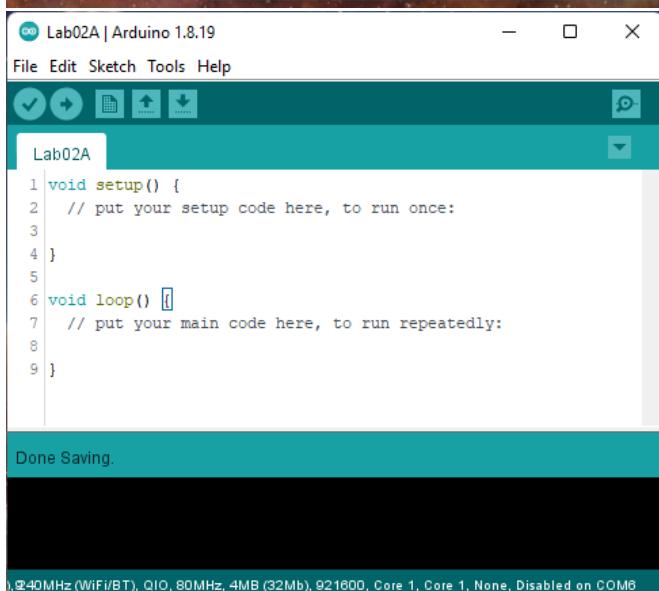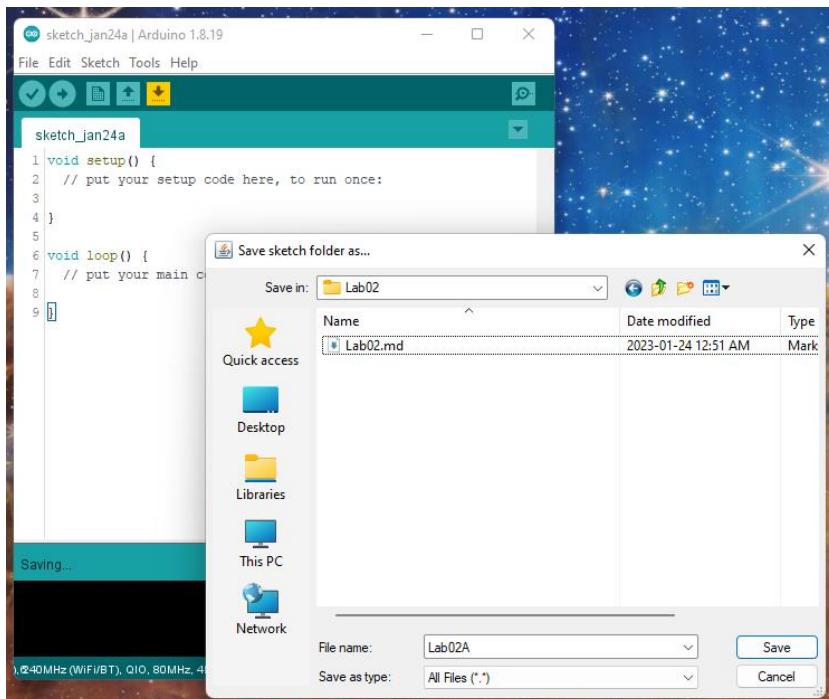

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

The 2 sensors we will be using are as follows:

- APDS9306 for Light Intensity
- Si7020-A20 for Temperature

The APDS9306 library must be downloaded from GitHub. Navigate to the following link:

<https://github.com/gmarti/AsyncAPDS9306>

The screenshot shows the GitHub repository page for 'gmarti / AsyncAPDS9306'. The repository is public and has 2 forks. The 'Code' tab is selected, showing the commit history. The commits include fixes for warning control and initial commits for various files like examples, .gitignore, AsyncAPDS9306.cpp, AsyncAPDS9306.h, README.md, and library.properties. The repository is tagged as an 'Async library for APDS-9306' and includes tags for arduino, mysensors, and apds-9306. The 'About' section provides basic information like the license (GPL-3.0), star count (0), watch count (0), and fork count (2). The 'Releases' section indicates there are no releases.


Press **Code > Download Zip**.

The screenshot shows the 'Code' dropdown menu on the GitHub repository page. The 'Clone' section is visible, showing the HTTPS URL: <https://github.com/gmarti/AsyncAPDS9306.git>. Below it, the 'Download ZIP' option is highlighted with a red box. The rest of the page shows the repository's file structure and a sidebar with repository statistics.


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

Navigate back to the Arduino IDE.

Navigate to Sketch > Include Library > Add .ZIP Library.


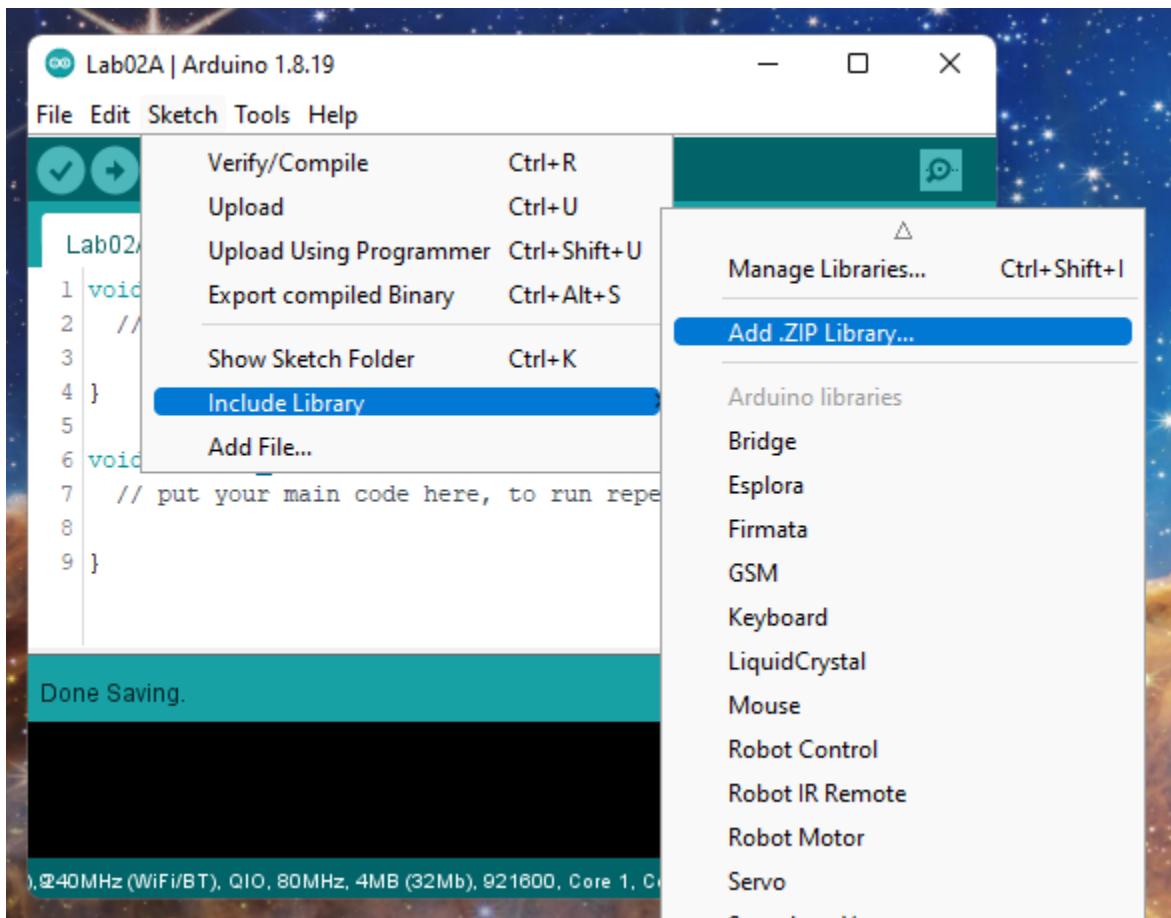


Find and open the downloaded library.

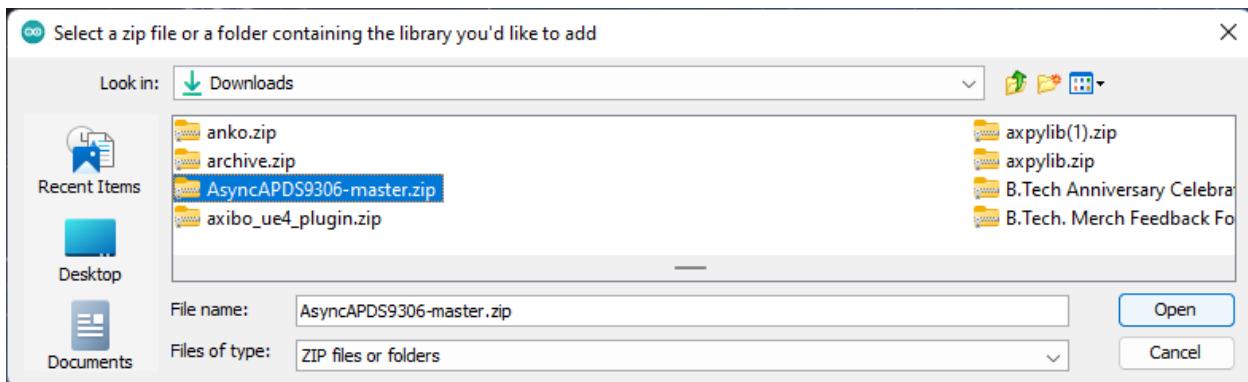

Create a new header file. Name this file **Lab02.h**.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

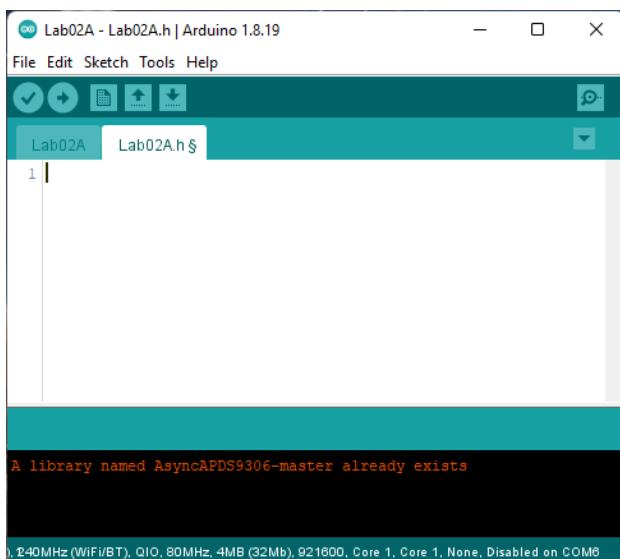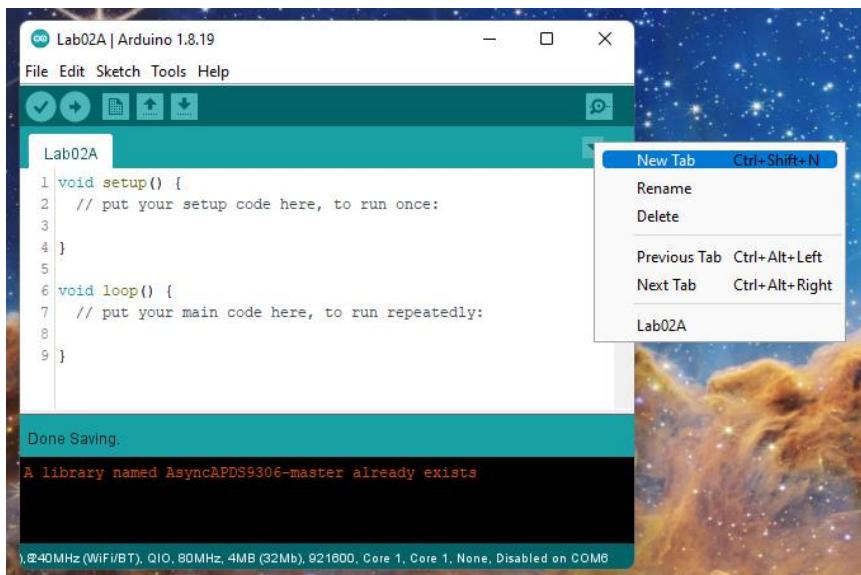

In this file, we will keep our dependencies, preprocessor macros, global variables, and global objects.

```
Lab02A Lab02A.h §  
1 //Libraries  
2 #include <Arduino.h>  
3 #include <Wire.h>  
4 #include <AsyncAPDS9306.h>  
5  
6 //IIC Addresses for Temperature Sensor  
7 #define ADDR (byte) (0x40)  
8 #define TMP_CMD (byte) (0xF3)  
9  
10 //Sample frequency  
11 #define DELAY_BETWEEN_SAMPLES_MS 5000  
12  
13 //Device information  
14 String groupName = "GroupA";  
15 String deviceName = "DeviceA";  
16  
17 //Instantiating sensor object and configuration  
18 AsyncAPDS9306 lightSensor;  
19 const APDS9306_ALS_GAIN_t aGain = APDS9306_ALS_GAIN_1;  
20 const APDS9306_ALS_MEAS_RES_t aTime = APDS9306_ALS_MEAS_RES_16BIT_25MS;  
21
```

Lastly, lets instantiate some global objects for classes that we will be using throughout the code.

This concludes the header file. Let's move back to the implementation file.

Firstly, include our header file.

```
Lab02A § Lab02A.h  
1 #include "Lab02A.h"  
2  
3 void setup() {  
4     // put your setup code here, to run once:  
5 }  
6  
7 void loop() {  
8     // put your main code here, to run repeatedly:  
9 }  
10  
11 }  
12
```

Next, set up the void setup() function.

```
Lab02A § Lab02A.h §
1 #include "Lab02A.h"
2
3 void setup() {
4     Serial.begin(9600);
5     Serial.print("\n\n-----\n"
6                 + groupName + " : " + deviceName + "\n-----\n\n");
7
8     Wire.begin();
9     Wire.beginTransmission(ADDR);
10    Wire.endTransmission();
11    delay(300);
12
13    lightSensor.begin(aGain, aTime);
14
15 }
16
```

Moving onto the void loop() function, it should be noticed that both the Temperature and Light Intensity sensors are being polled in different ways.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


Lab02A

Lab02A.h


```
17 void loop() {
18
19     //Temp sensor
20     Wire.beginTransmission(ADDR);
21     Wire.write(TMP_CMD);
22     Wire.endTransmission();
23     delay(100);
24
25     Wire.requestFrom(ADDR, 2);
26
27     char data[2];
28     if(Wire.available() == 2){
29         data[0] = Wire.read();
30         data[1] = Wire.read();
31     }
32
33     float temp = ((data[0] * 256.0) + data[1]);
34     float tempC = ((175.72 * temp) / 65536.0) - 46.85;
35     Serial.println("Temperature: " + String(tempC) + " degC");
36
37
38     //Sample light sensor
39     AsyncAPDS9306Data lightData = lightSensor.syncLuminosityMeasurement();
40
41     //Calculate luminosity
42     float lux = lightData.calculateLux();
43     Serial.println("Luminosity: " + String(lux) + " Lux");
44
45
46     delay(DELAY_BETWEEN_SAMPLES_MS);
47
48 }
```

To upload to the board, change the board to ESP32 Dev Module.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

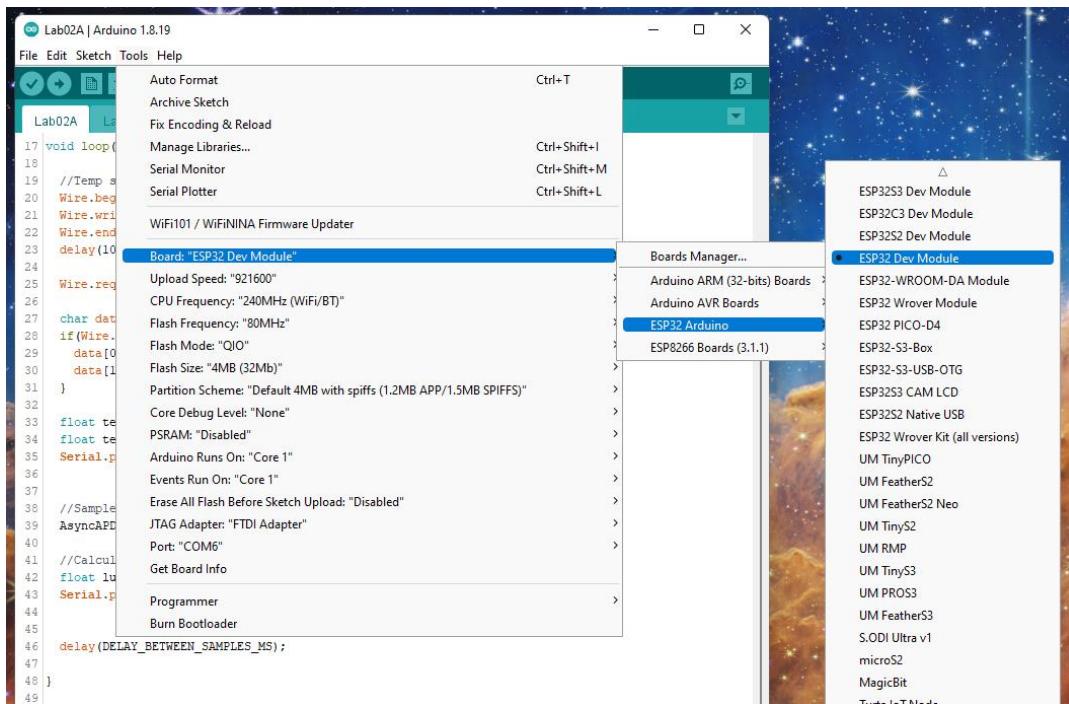


Leave the default communication settings the same, with the exception of the COM port. Select the COM port that your microcontroller is connected to.

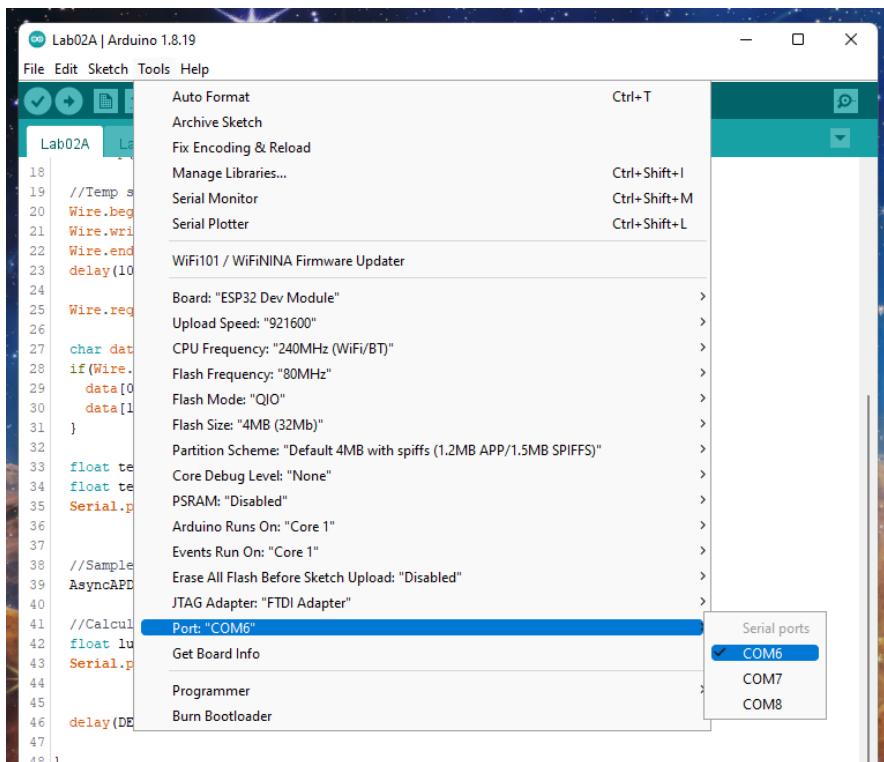


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

Uploading to the MacIoT board can be somewhat unintuitive. Follow the following steps:

1 - Hold down **both** the **FLASH** and **RESET** buttons

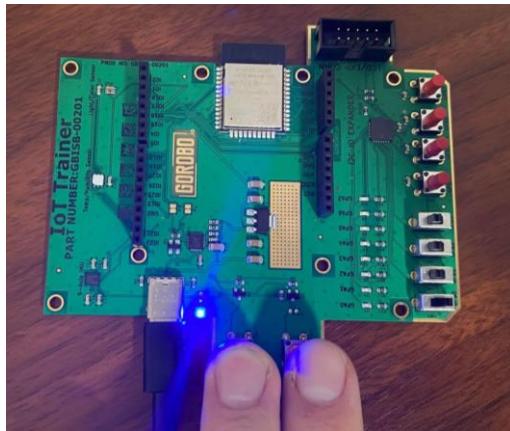


2 - After 2 seconds, **release** the **RESET** button. Continue to hold the **FLASH** button

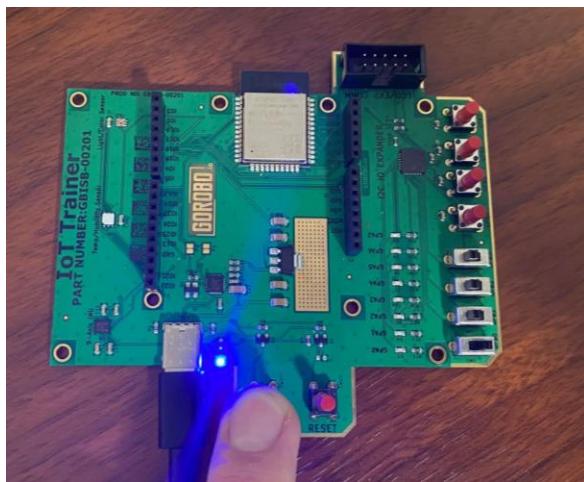

3 - Once the code finishes compiling and begins to upload, **release** the **FLASH** button.

```
Done Saving.  
  
Sketch uses 275973 bytes (21%) of program storage space. Maximum is 1310720 bytes.  
Global variables use 22472 bytes (6%) of dynamic memory, leaving 305208 bytes for local variables. Maxim  
esptool.py v4.2.1  
Serial port COM6  
Connecting.....
```

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

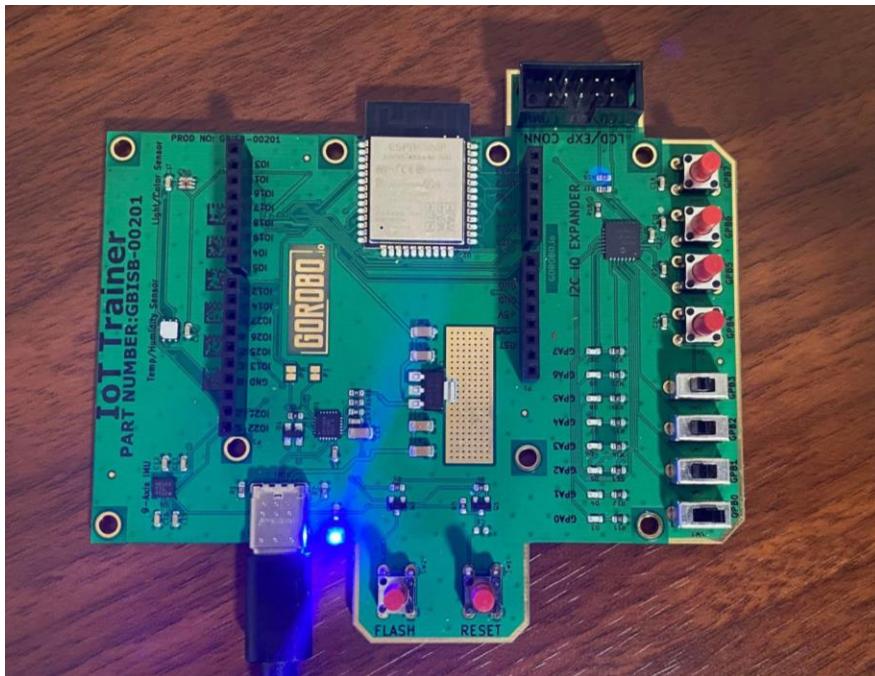


A successful upload should look like this:

```
Done Saving.  
Compressed 3072 bytes to 146...  
Writing at 0x00008000... (100 %)  
Wrote 3072 bytes (146 compressed) at 0x00008000 in 0.1 seconds (effective 423.1 kbit/s)...  
Hash of data verified.  
Compressed 8192 bytes to 47...  
Writing at 0x0000e000... (100 %)  
Wrote 8192 bytes (47 compressed) at 0x0000e000 in 0.1 seconds (effective 587.1 kbit/s)...  
Hash of data verified.  
Compressed 276368 bytes to 154169...  
Writing at 0x00010000... (10 %)  
Writing at 0x0001c669... (20 %)  
Writing at 0x00024d75... (30 %)  
Writing at 0x0002ala7... (40 %)  
Writing at 0x0002f6c4... (50 %)  
Writing at 0x00034d01... (60 %)  
Writing at 0x0003d2c7... (70 %)  
Writing at 0x0004666b... (80 %)  
Writing at 0x0004ba9a... (90 %)  
Writing at 0x00051371... (100 %)  
Wrote 276368 bytes (154169 compressed) at 0x00010000 in 2.6 seconds (effective 854.4 kbit/s)...  
Hash of data verified.  
  
Leaving...  
Hard resetting via RTS pin...
```


## *Lab 2 - Communicating Sensor Data over a Bluetooth Network*

After the upload is complete (NOT DURING), launch the **Serial monitor** to view the microcontroller output.

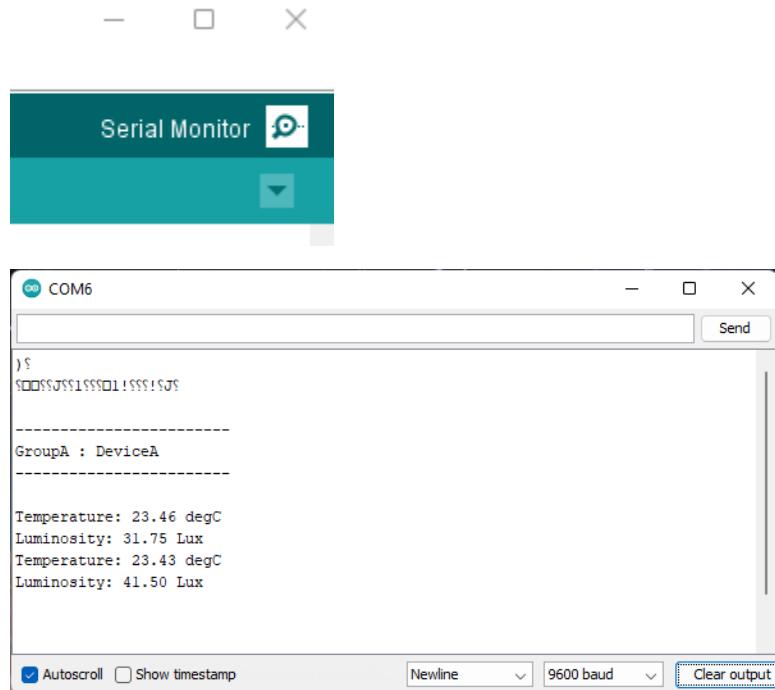


## Transmitting Over Bluetooth


Navigate back to your **Lab02** folder. Copy **Lab02A** and **rename it to Lab02B**.

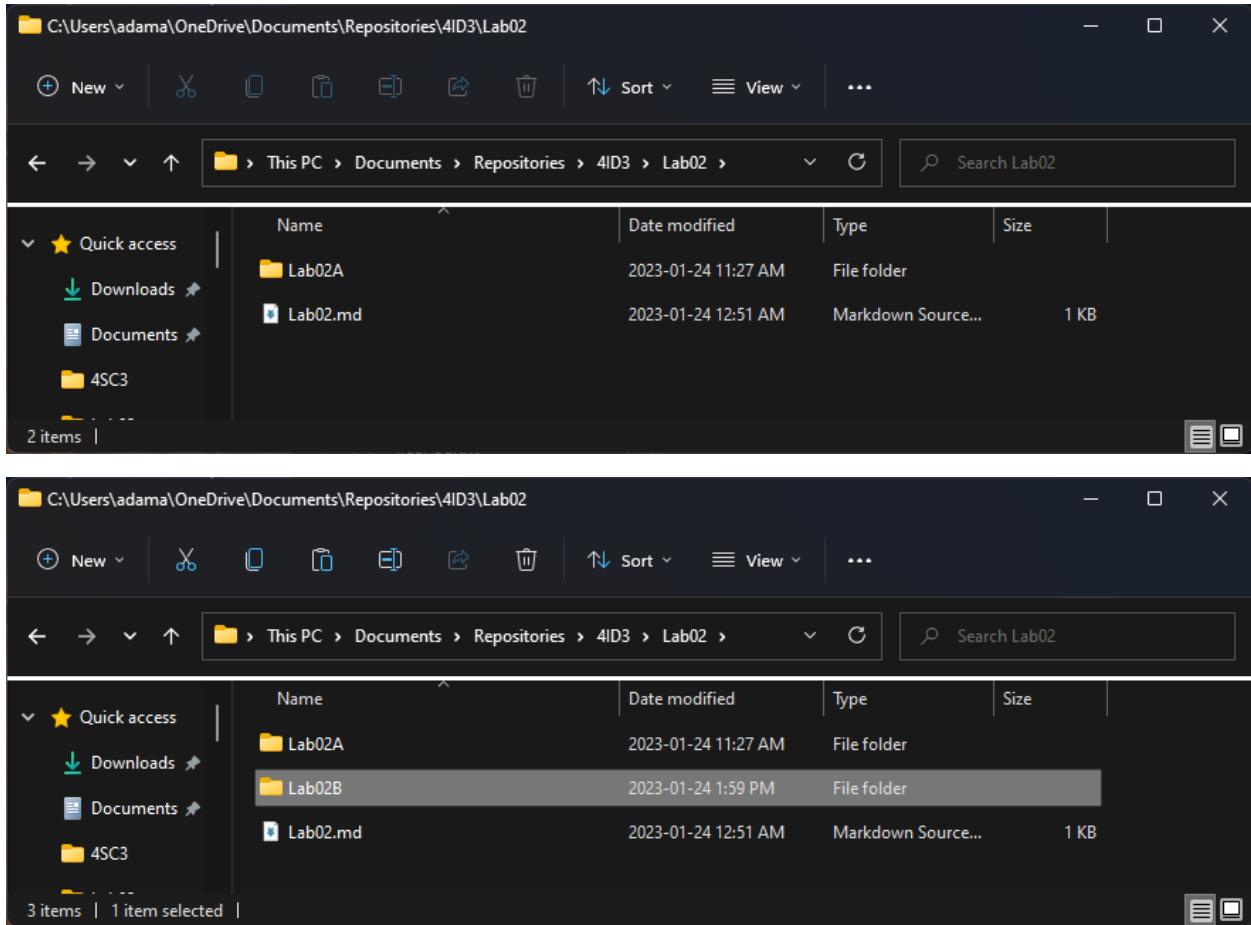

Rename the constituent files.

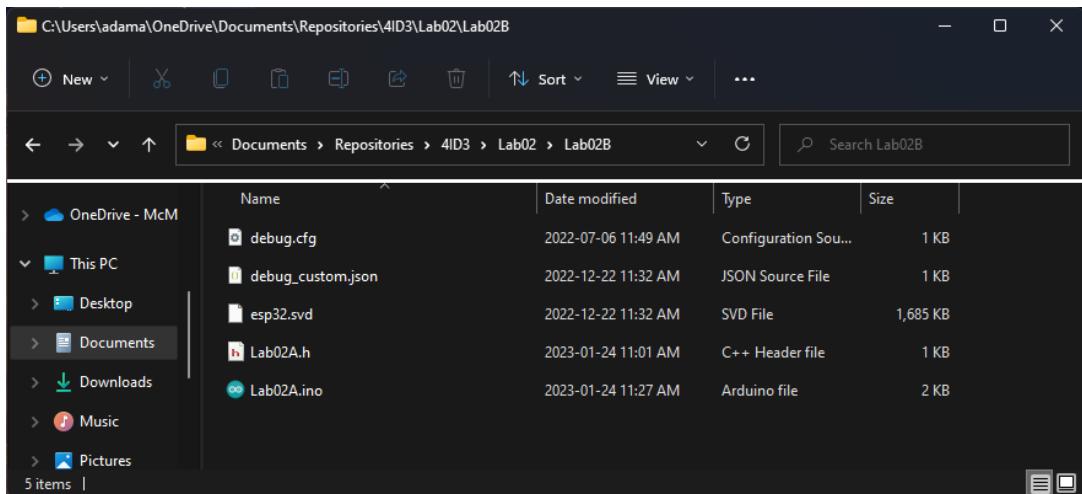


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

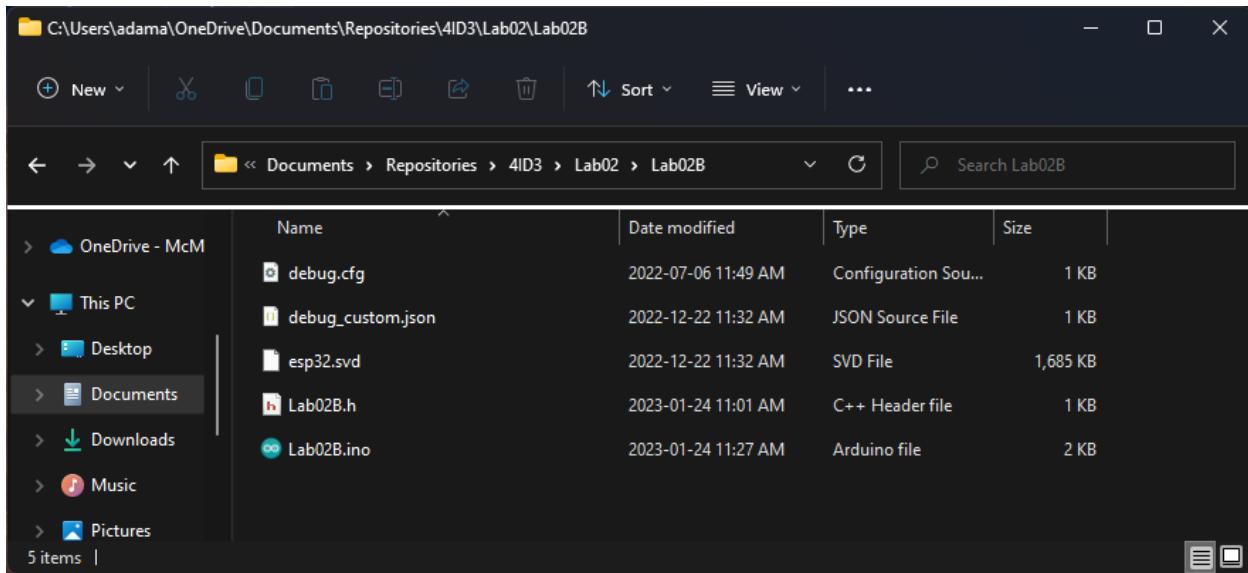

Open the project in **Arduino IDE**.

Rename the header file import to match the new name.

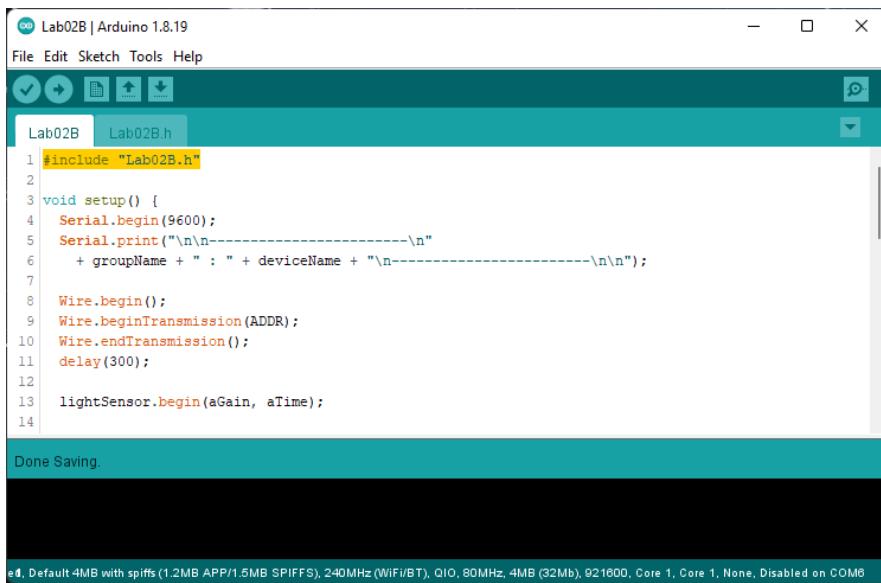

Modify the header file to include the built-in **BluetoothSerial** library. Instantiate a serial object for use in the implementation file.

Lab02B

Lab02B.h \$

```
1 //Libraries
2 #include <Arduino.h>
3 #include <Wire.h>
4 #include <AsyncAPDS9306.h>
5 #include "BluetoothSerial.h"
6
7 //IIC Addresses for Temperature Sensor
8 #define ADDR (byte) (0x40)
9 #define TMP_CMD (byte) (0xF3)
10
11 //Sample frequency
12 #define DELAY_BETWEEN_SAMPLES_MS 5000
13
14 //Device information
15 String groupName = "GroupA";
16 String deviceName = "DeviceA";
17
18 //Instantiating sensor object and configuration
19 AsyncAPDS9306 lightSensor;
20 const APDS9306_ALS_GAIN_t aGain = APDS9306_ALS_GAIN_1;
21 const APDS9306_ALS_MEAS_RES_t aTime = APDS9306_ALS_MEAS_RES_16BIT_25MS;
22
23 //Instantiating bluetooth serial object
24 BluetoothSerial SerialBT;
25
```

In the **setup()** function of the implementation file, use the **begin()** method of the **SerialBT** object to initialize the Bluetooth link.

```
Lab02B  Lab02B.h §  
1 #include "Lab02B.h"  
2  
3 void setup() {  
4     Serial.begin(9600);  
5     Serial.print("\n\n-----\n"  
6                 + groupName + " : " + deviceName + "\n-----\n\n");  
7  
8     Wire.begin();  
9     Wire.beginTransmission(ADDR);  
10    Wire.endTransmission();  
11    delay(300);  
12  
13    lightSensor.begin(aGain, aTime);  
14  
15    SerialBT.begin(groupName + " : " + deviceName);  
16    Serial.println("Ready for bluetooth connection!");  
17  
18 }  
19
```

In the **loop()** function of the implementation file, concatenate a JSON object with your desired data. This JSON String is then interpreted as a C-style character array and pushed into the Bluetooth output buffer one element at a time.

Lab02B

Lab02B.h

```
20 void loop() {
21
22     //Temp sensor
23     Wire.beginTransmission(ADDR);
24     Wire.write(TMP_CMD);
25     Wire.endTransmission();
26     delay(100);
27
28     Wire.requestFrom(ADDR, 2);
29
30     char data[2];
31     if(Wire.available() == 2){
32         data[0] = Wire.read();
33         data[1] = Wire.read();
34     }
35
36     float temp = ((data[0] * 256.0) + data[1]);
37     float tempC = ((175.72 * temp) / 65536.0) - 46.85;
38     Serial.println("Temperature: " + String(tempC) + " degC");
39
40     //Sample light sensor
41     AsyncAPDS9306Data lightData = lightSensor.syncLuminosityMeasurement();
42
43     //Calculate luminosity
44     float lux = lightData.calculateLux();
45     Serial.println("Luminosity: " + String(lux) + " Lux");
46
47
48     //Format data as a JSON string
49     String sendData = "{ \"": + groupName + "\": { \"": + deviceName + "\": { \"": + "Temp\"": \""
50         + String(tempC) + "\", \"": + "Luminosity\"": \"" + String(lux) + "\""} } }" + '\n';
51
52     Serial.println("Prepared bluetooth message: " + sendData);
53
54     //Push the string characters onto the bluetooth output buffer
55     for (int i = 0; i < strlen(sendData.c_str()) + 1; i++){
56         SerialBT.write(sendData.c_str()[i]);
57     }
58
59     delay(500);
60     Serial.println("Bluetooth sent!");
61
62     delay(DELAY_BETWEEN_SAMPLES_MS);
63
64 }
```

Upload the modified project to your MacIoT board.

Open **Serial Monitor** and observe the serial output.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

The screenshot shows a terminal window titled "COM5". The window contains the following text:

```
l]?\x21\$]08\$a=-\$555\et\$55%\QS
-----
GroupA : DeviceA
-----
Ready for bluetooth connection!
Temperature: 31.33 degC
Luminosity: 79.25 Lux
Prepared bluetooth message: { "GroupA": { "DeviceA": { "Temp": "31.33", "Luminosity": "79.25" } } }

Bluetooth sent!
Temperature: 29.51 degC
Luminosity: 75.00 Lux
Prepared bluetooth message: { "GroupA": { "DeviceA": { "Temp": "29.51", "Luminosity": "75.00" } } }

Bluetooth sent!
```

At the bottom of the window, there are several configuration options:

- Autoscroll  Show timestamp
- Newline
- 9600 baud
-

## Viewing a Bluetooth Serial Device

Navigate to the following URL and install **MobaXterm Home Edition**.



<https://mobaxterm.mobatek.net/download-home-edition.html>

Choose the **Installer Edition**.


The screenshot shows the official download page for MobaXterm Home Edition. At the top, there's a navigation bar with links for Home, Demo, Features, Download (which is highlighted in red), Plugins, Help, Contact, and social media icons (Facebook, Twitter, LinkedIn, YouTube). To the right are buttons for 'Customer area' and 'Buy'. Below the navigation, the title 'MobaXterm Home Edition' is displayed. A sub-section titled 'Download MobaXterm Home Edition (current version):' contains two download buttons: a blue one for 'MobaXterm Home Edition v22.3 (Portable edition)' and a green one for 'MobaXterm Home Edition v22.3 (Installer edition)'. Further down, it says 'Download previous stable version: [MobaXterm Portable v22.2](#) [MobaXterm Installer v22.2](#)'. It also mentions 'You can also get early access to the latest features and improvements by downloading MobaXterm Preview version:' followed by an orange button labeled 'MobaXterm Preview Version'. At the bottom, there's a note about accepting terms and conditions, and a link to download third-party plugins.

A **ZIP** file will be downloaded. This file must be extracted and the **MSI** installer must be ran as **Administrator**.


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

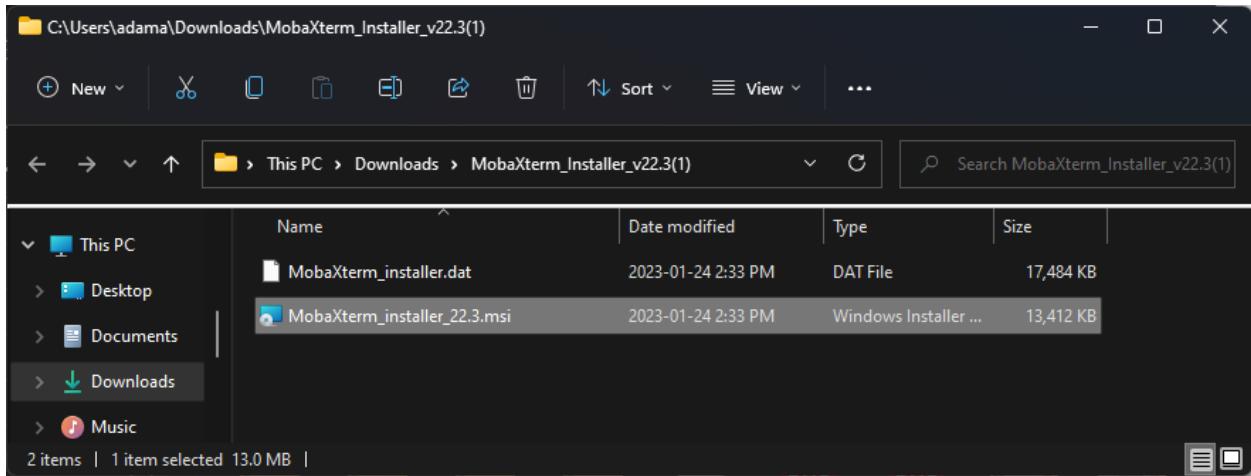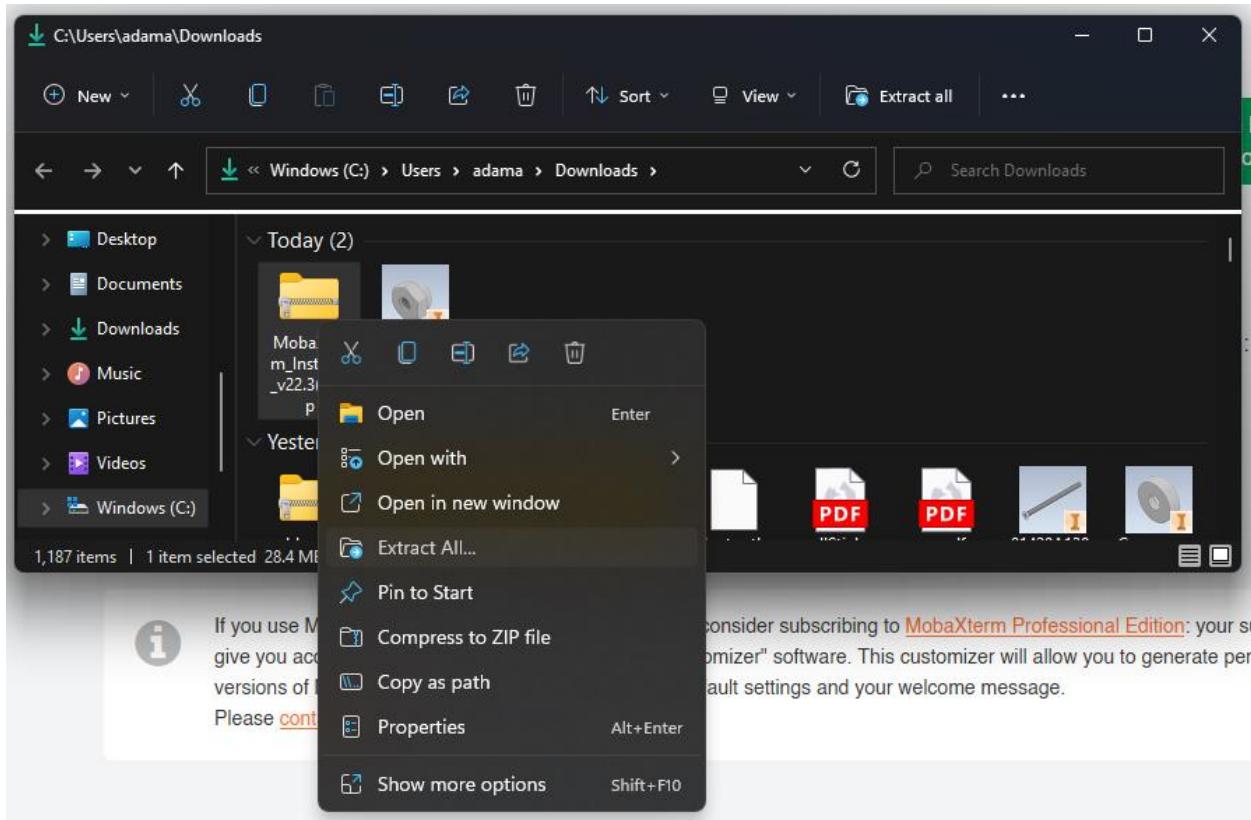

Install using the default options.

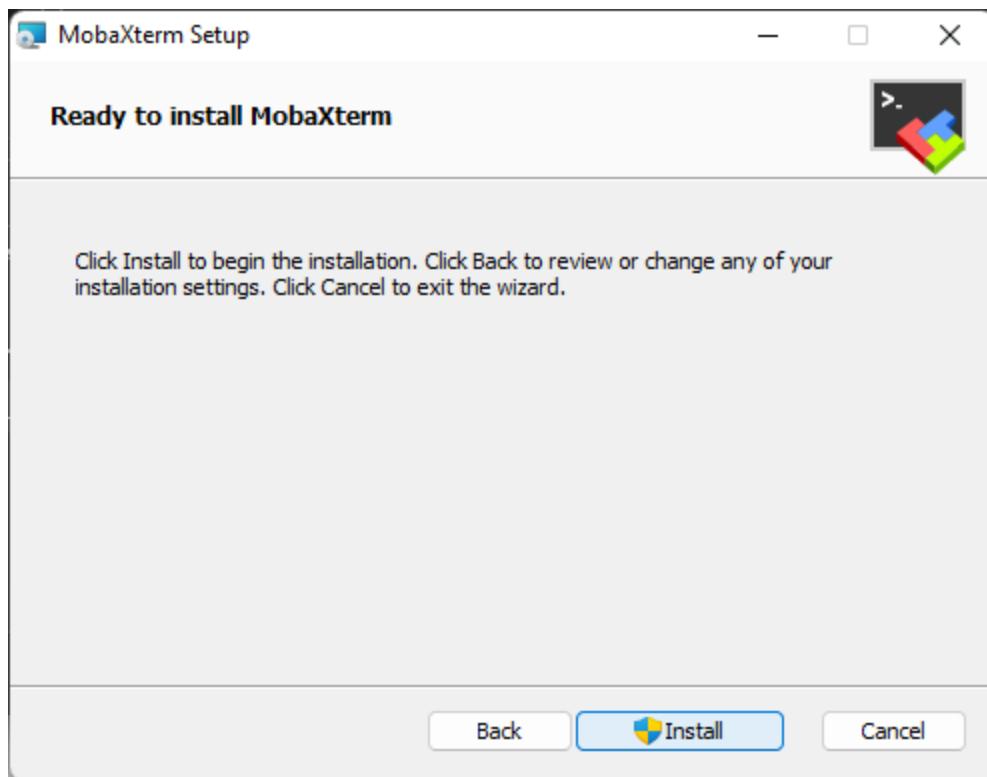


Launch **MobaXTerm**.

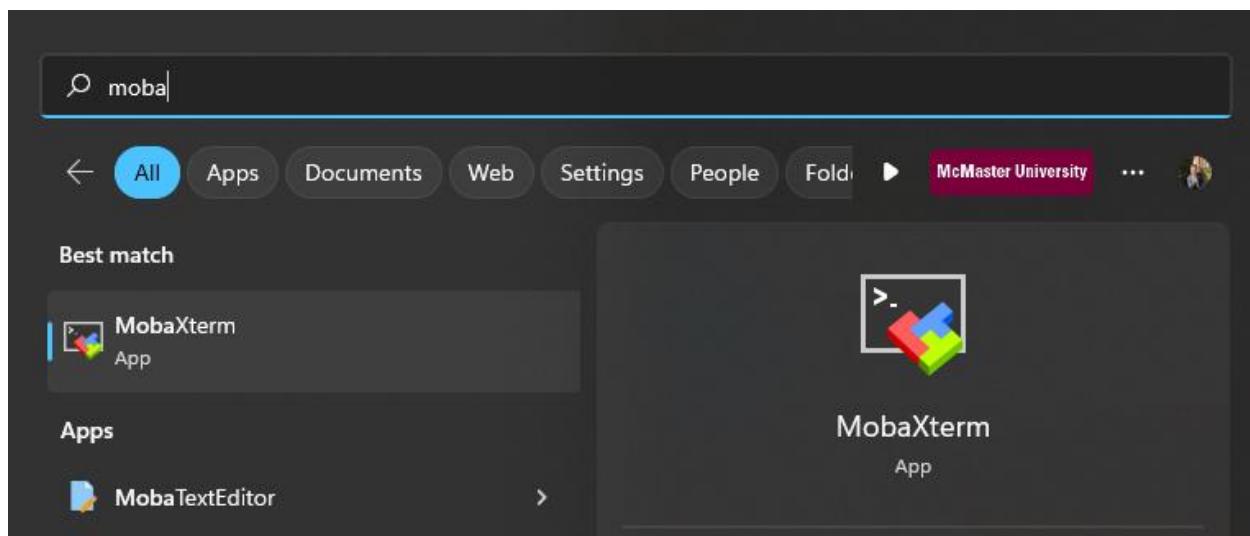


MobaXTerm is a feature filled application that is used to manage servers and ports. We will be using it to open the Bluetooth serial port and ensure that data is being transmitted between the MacIoT board and our PC.


Before proceeding, enable Bluetooth on your PC and connect to the microcontroller.

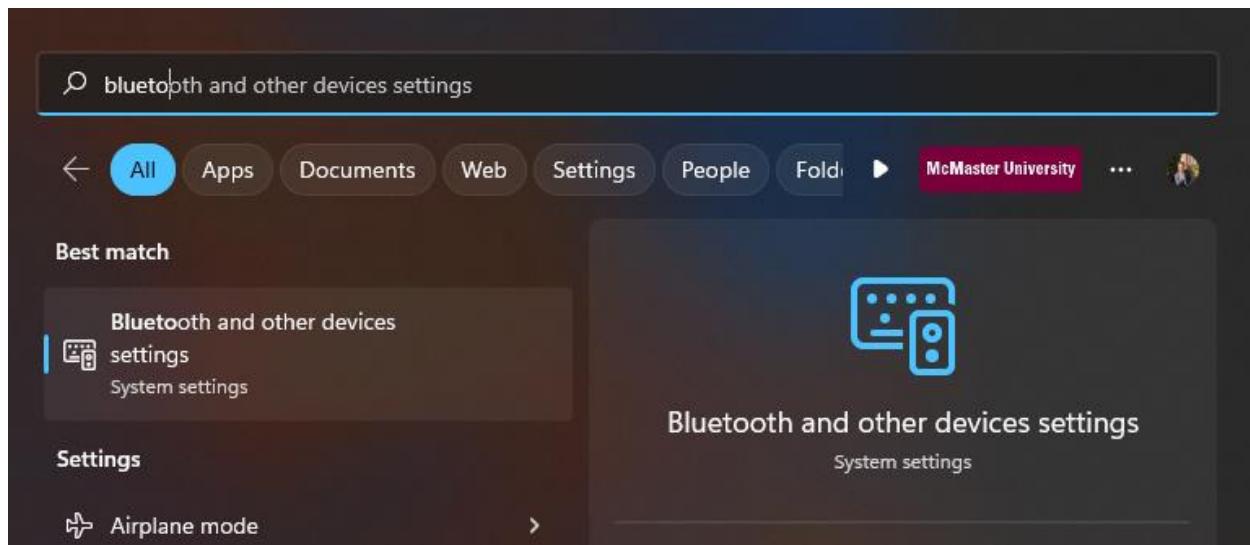

Toggle Bluetooth **On** and press **Add device**.

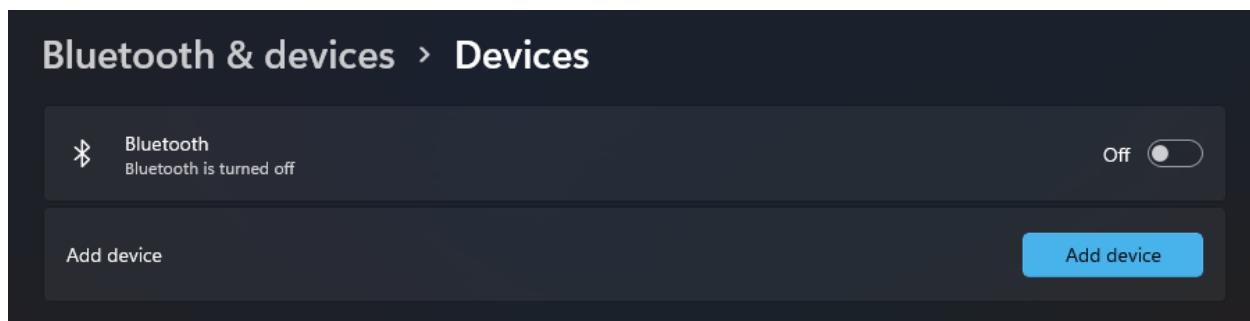


Choose **Bluetooth**.

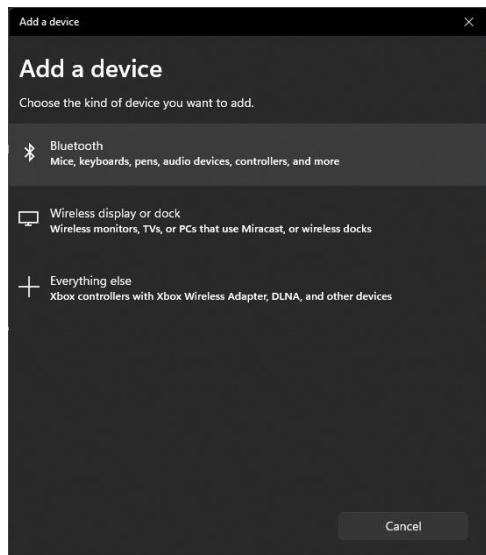

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


Press on your microcontroller to connect.

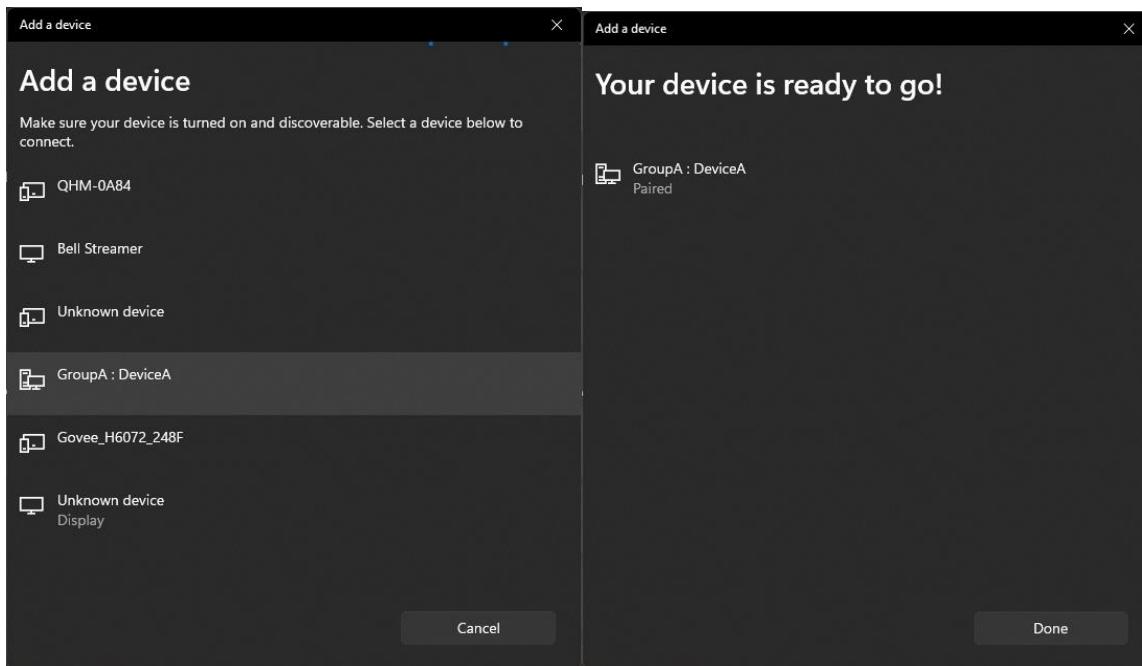

Navigate back to **MobaXTerm** and press **Session**.


Select **Serial** from the top ribbon.

Choose a Bluetooth serial port. You may need to try all that are available to find which one is transmitting.

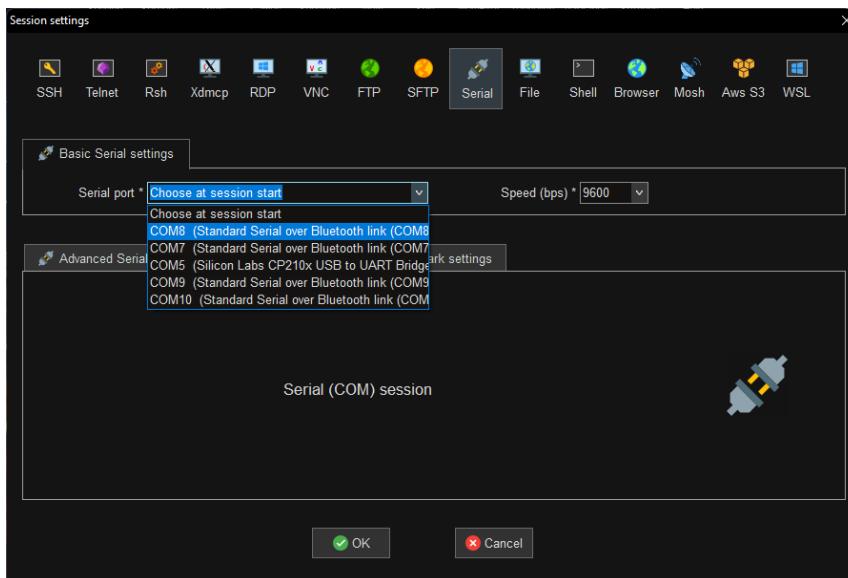

In my case, this ended up being **COM10** at **9600 baud**.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

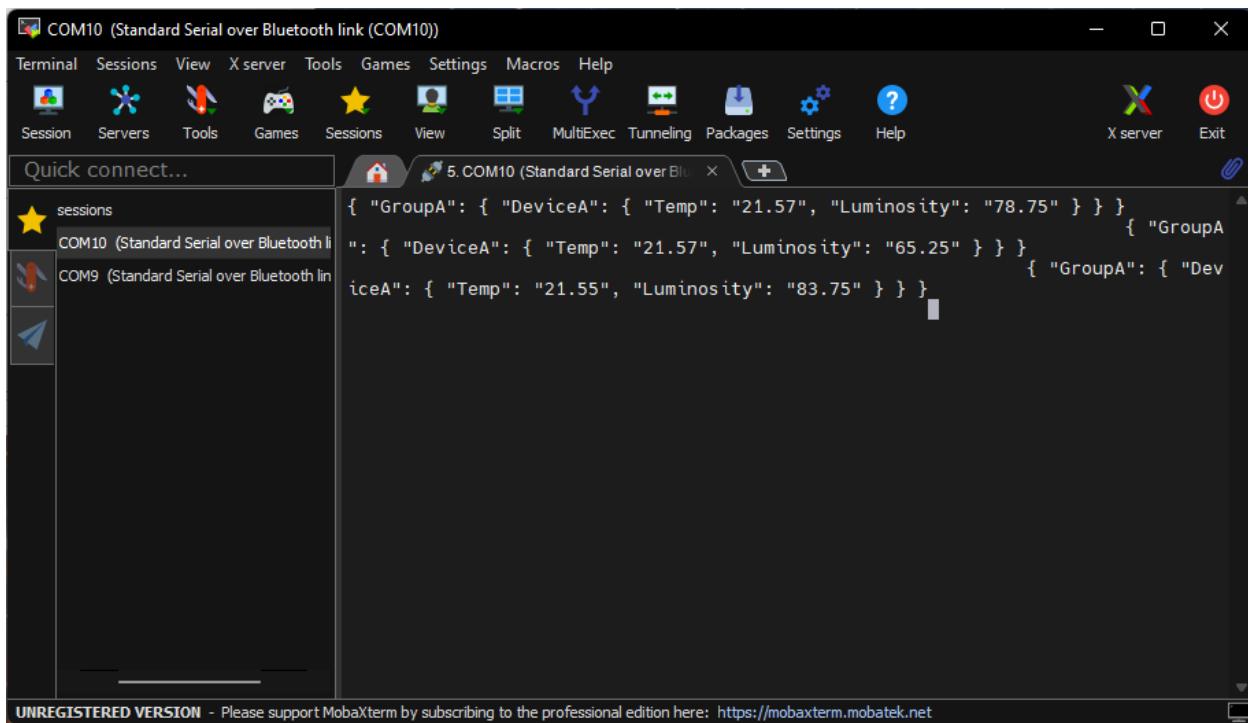

The screenshot shows the MobaXterm interface with a terminal window titled "COM10 (Standard Serial over Bluetooth link (COM10))". The terminal window displays the following JSON data:

```
{ "GroupA": { "DeviceA": { "Temp": "21.57", "Luminosity": "78.75" } } } { "GroupA": { "DeviceA": { "Temp": "21.57", "Luminosity": "65.25" } } } { "GroupA": { "DeviceA": { "Temp": "21.55", "Luminosity": "83.75" } } }
```

The left sidebar shows session icons for "sessions", "COM10 (Standard Serial over Bluetooth link)", and "COM9 (Standard Serial over Bluetooth link)". A message at the bottom of the terminal window reads: "UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>".

### Exercise A

Modify the MacIoT code so that **Humidity** is read from the sensor, formatted as a **JSON attribute**, and transmitted to MQTT.

*NOTE: The Python routing script will automatically parse the new parameter.*

IIC Humidity Command = 0xF5

IIC Humidity Address = 0x40 (same as temp)

What is JSON?: [https://www.w3schools.com/js/js\\_json\\_syntax.asp](https://www.w3schools.com/js/js_json_syntax.asp)

## Parsing Data using Python

It may not be enough to view the data. We want to be able to act on the data being sent, collect it over time, and visualize it on an HMI or familiar format.


### Installing Python

Navigate to the following website and install the latest version of Python 3.



<https://www.python.org/downloads/>



Install using the default options. If there is a checkbox to **Add to Path**, please **check this checkbox**.

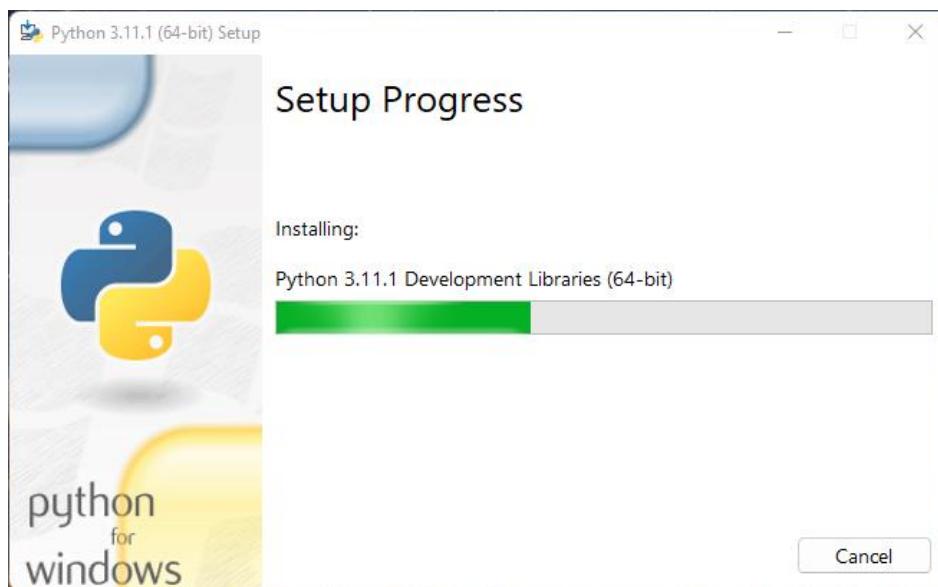

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

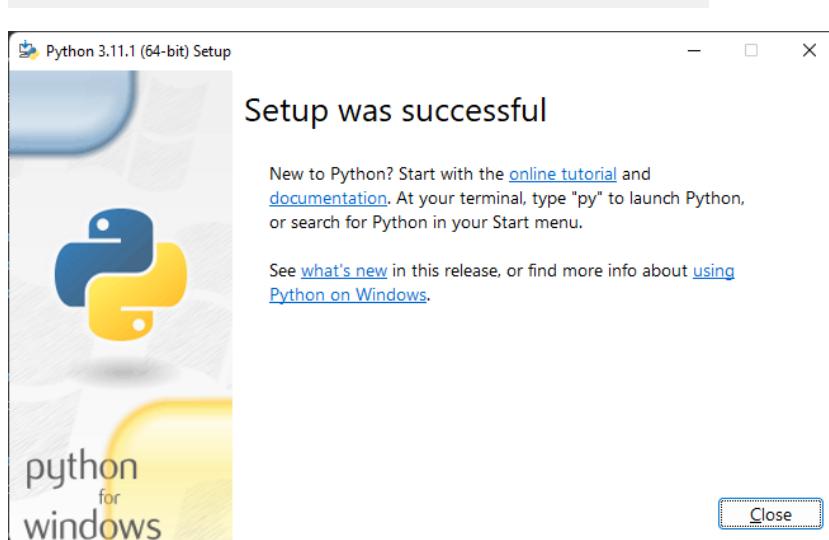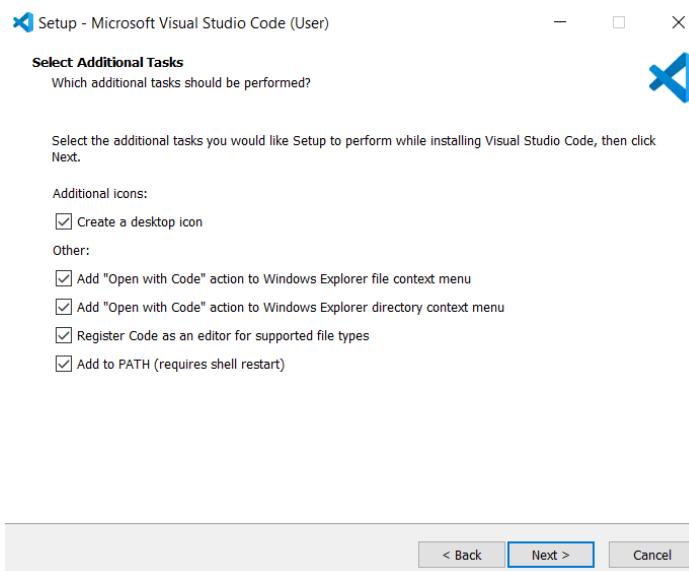

Once Python is installed, please **restart** your computer.


### Installing VSCode

Navigate to the following URL:

<https://code.visualstudio.com/download>

## Download Visual Studio Code


Free and built on open source. Integrated Git, debugging and extensions.

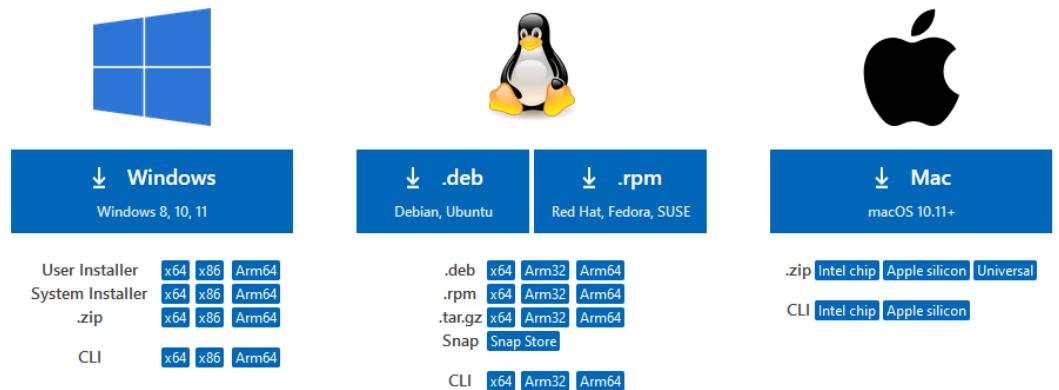

Run the installer using the default install options.

Once installed launch VSCode.



Open the **Extensions** tab using the ribbon on the left-side.

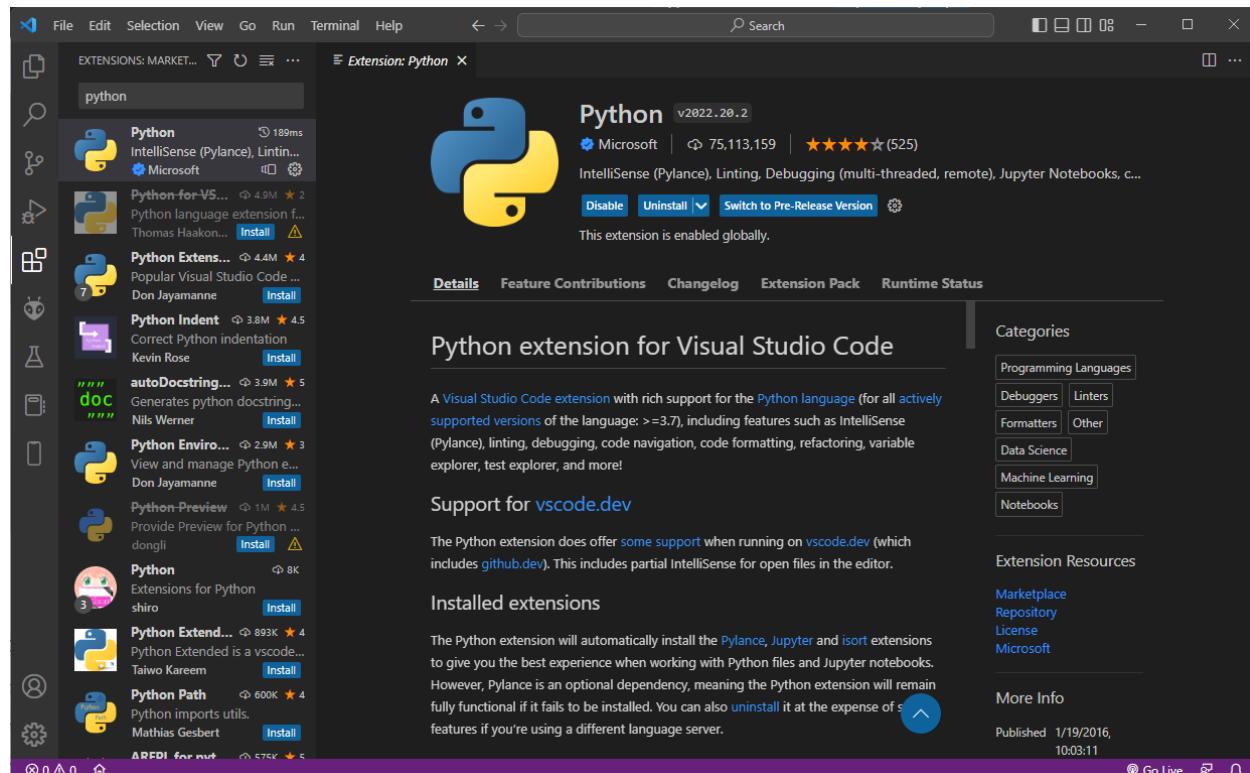

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


Search for **Python** and **Install** the one provided by **Microsoft**.

Within the **Lab02** folder, create a new folder named **Scripts**.

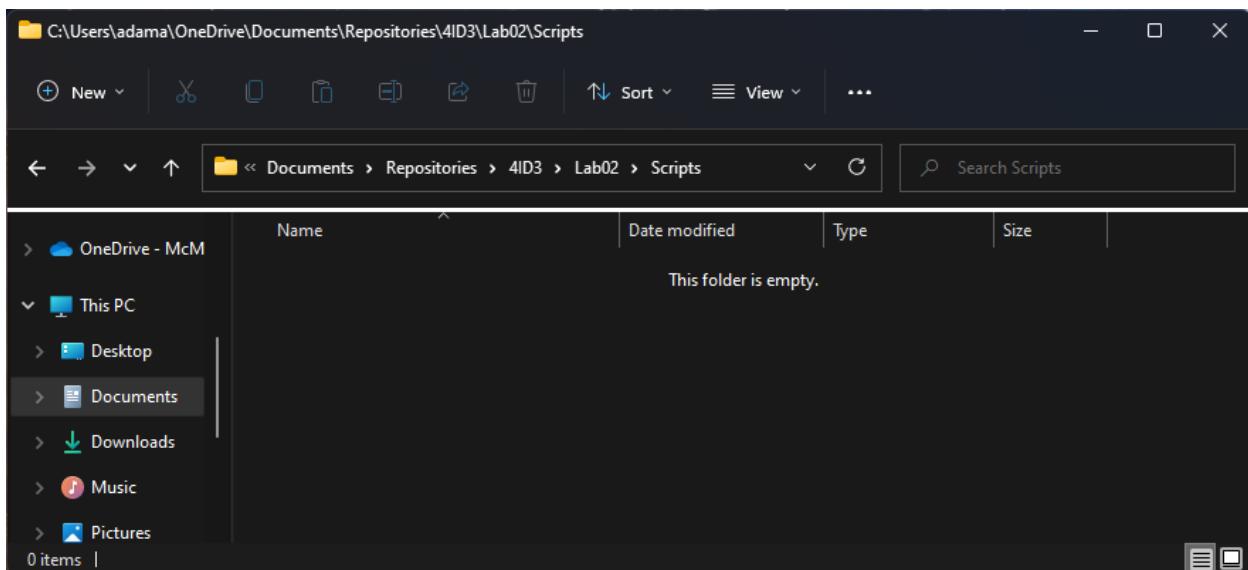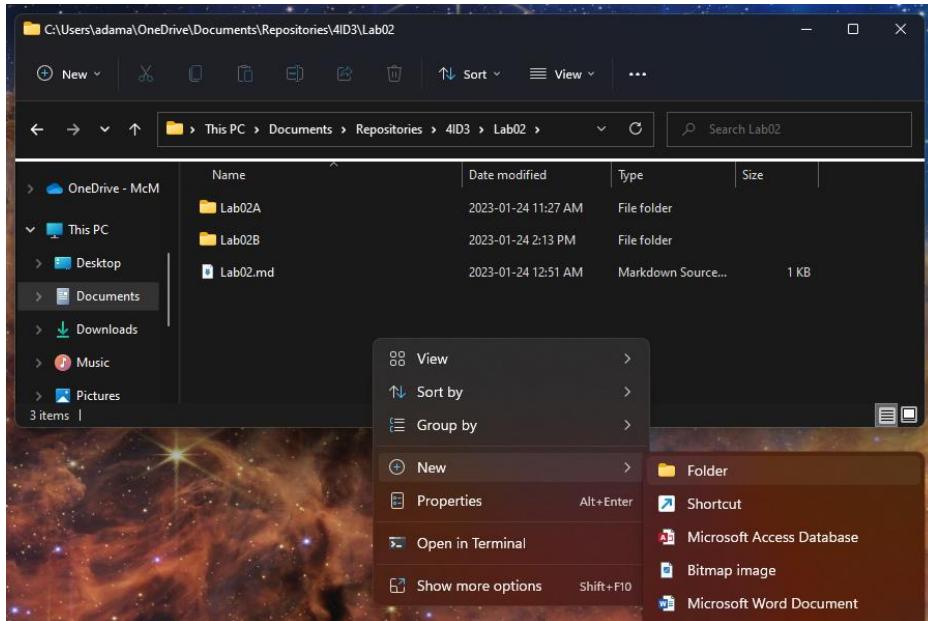


Within VSCode, do **File > Open Folder**.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

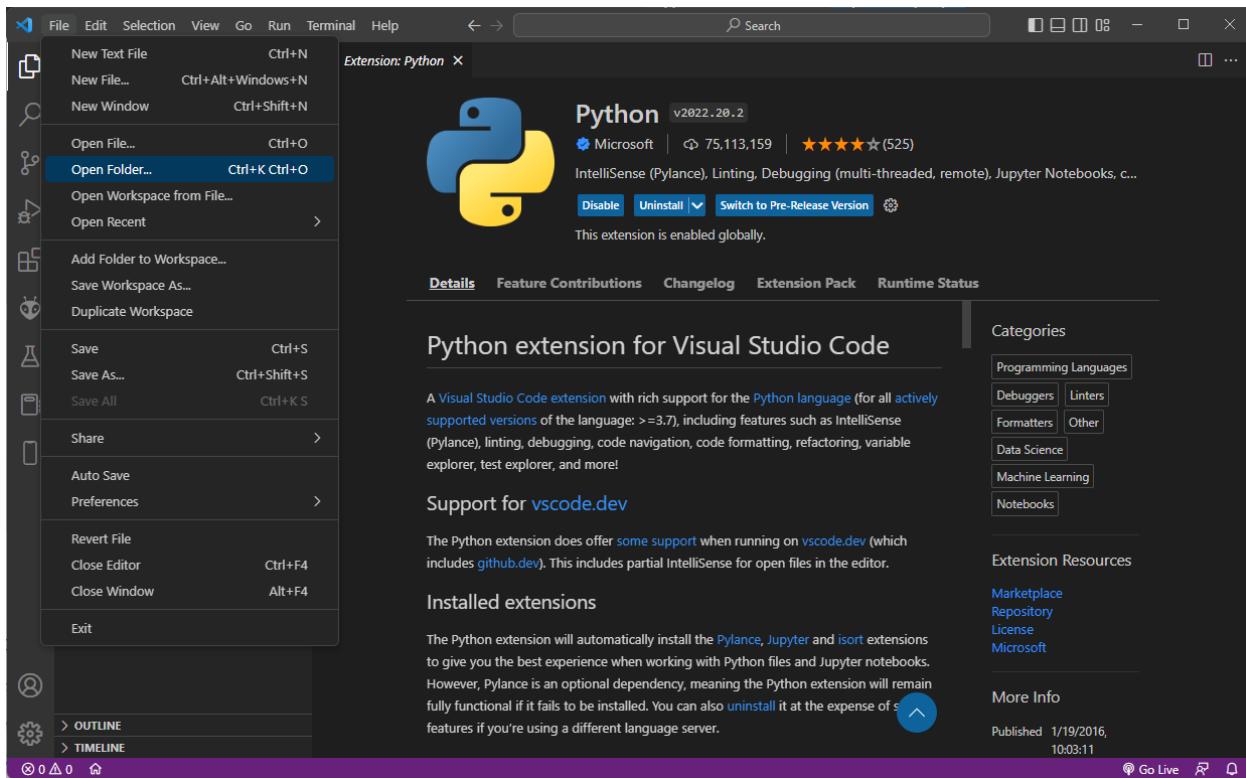


Open your local repository.

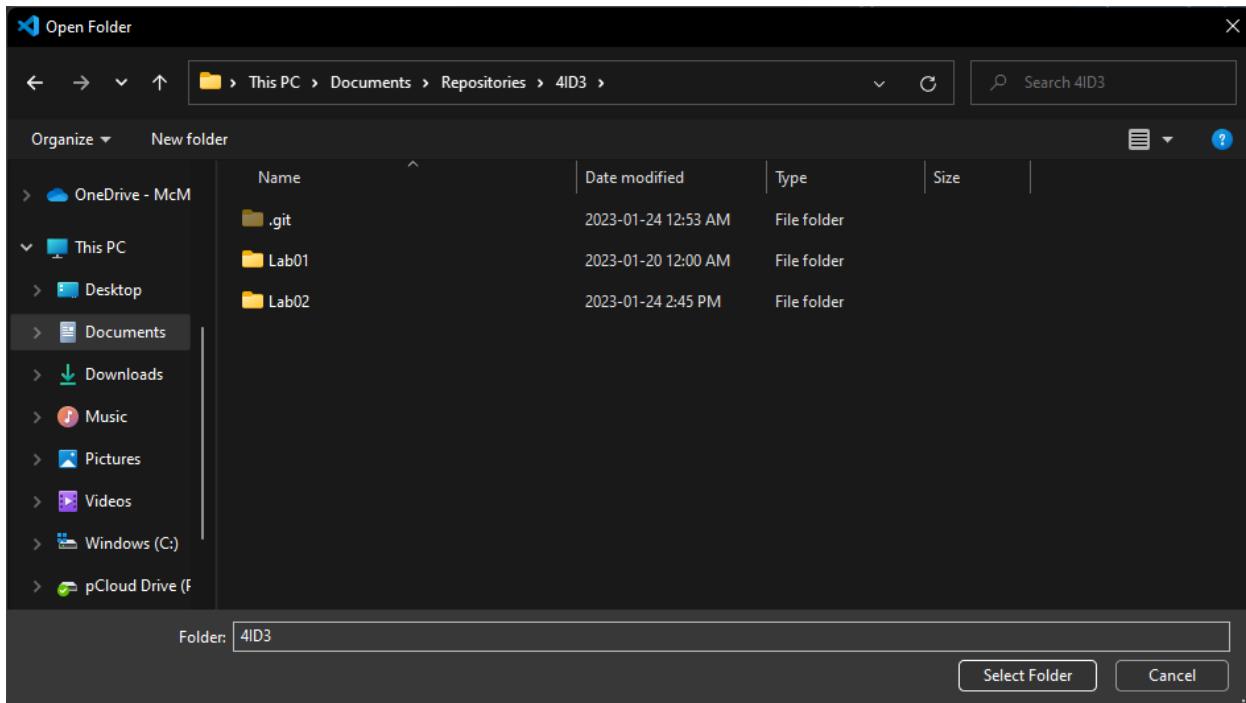

You should be able to see your **Scripts/** folder in the **File Explorer** on the left-tab of your **VSCode Editor**.


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

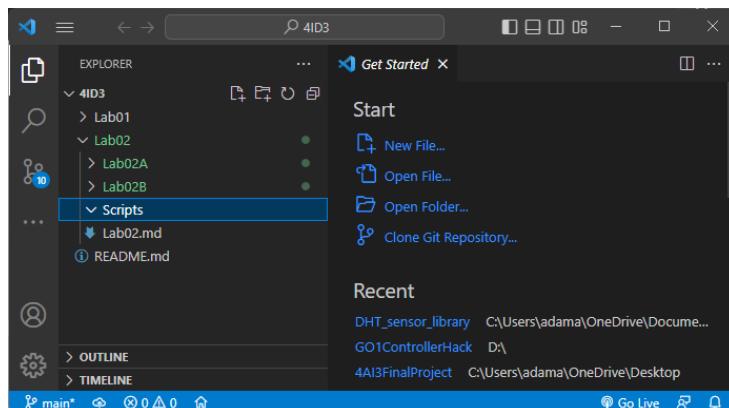

### MQTT Routing


The first script that we will write will parse the JSON string with our smart device data and route it to its appropriate MQTT path.

Right-click and select **New File**.

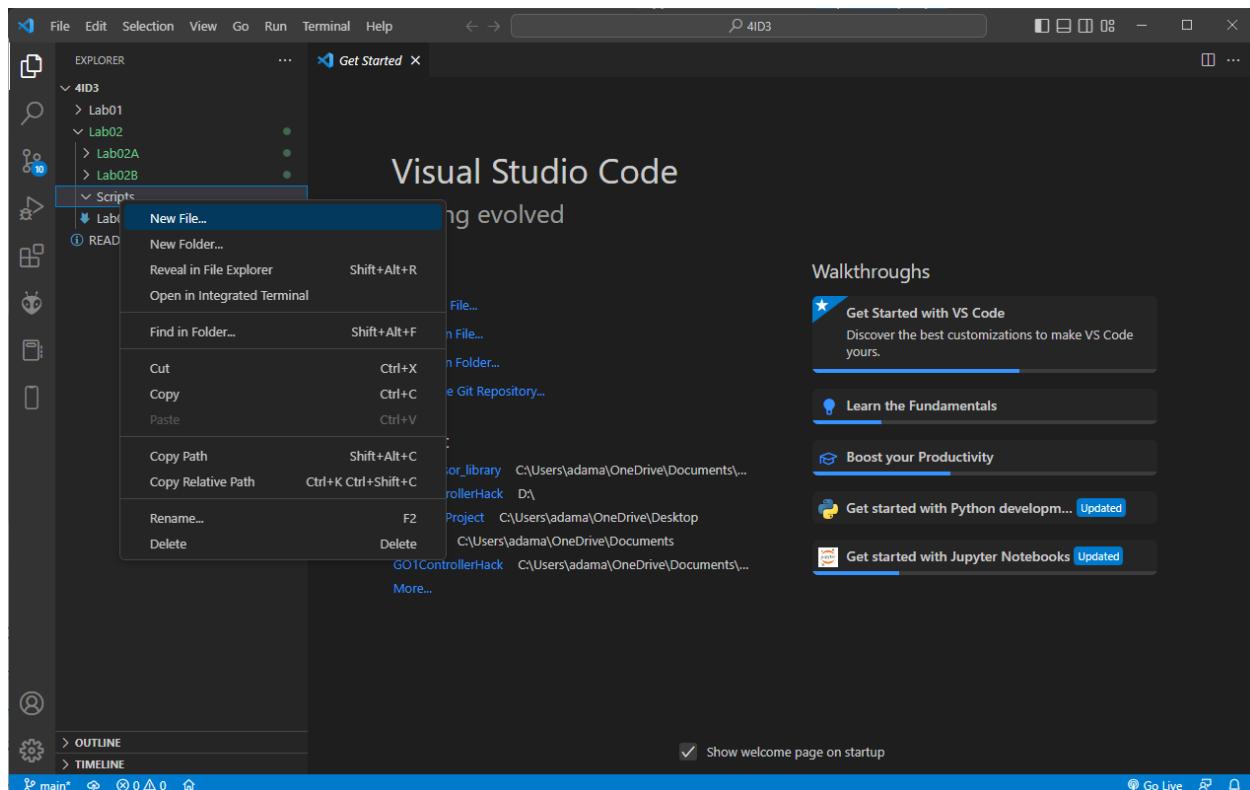


Name it **btserial2mqtt.py**.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

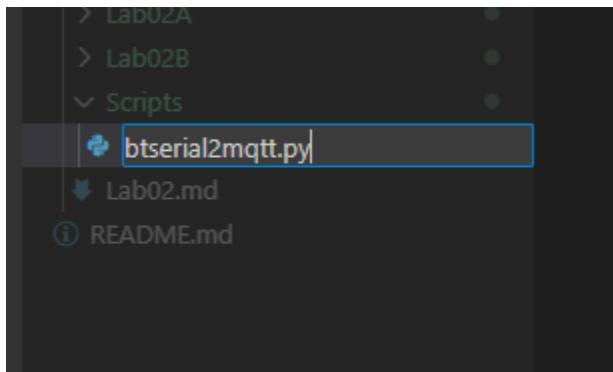

Double-click to open it in the text editor.

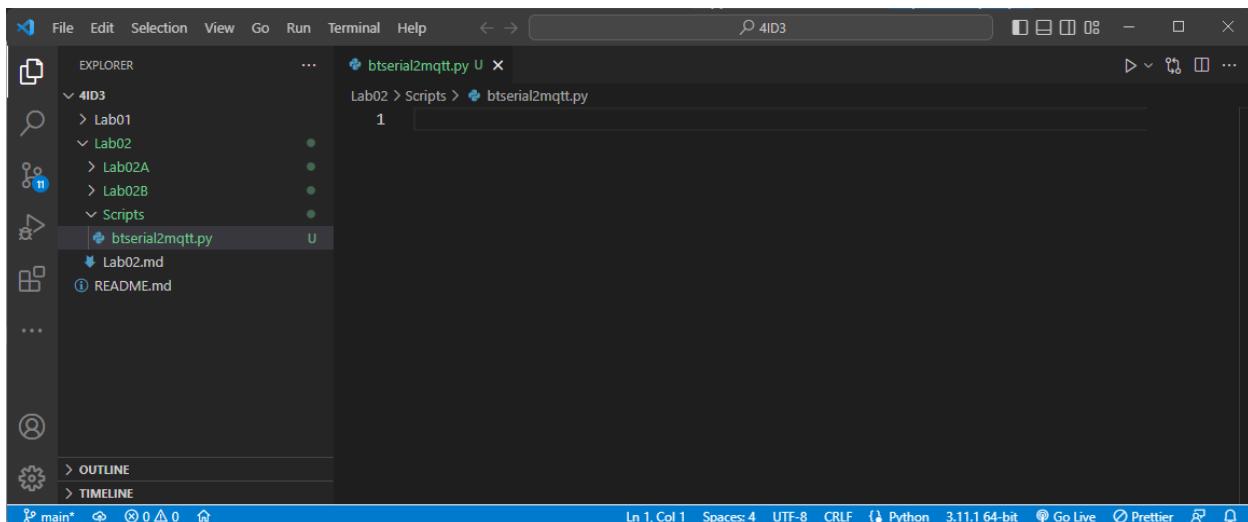

Copy out the following python script:

```
import serial
import json
import paho.mqtt.client as mqtt
import time
mqttIp = None
mqttPort = None
bluetoothCOM = None

mqttIp = input("MQTT Broker IP: ")
if(mqttIp == None or mqttIp == ''): mqttIp = 'test.mosquitto.org'

mqttPort = input("MQTT Broker Port: ")
if(mqttPort == None or mqttPort== ''): mqttPort = 1883

bluetoothCOM = input("Bluetooth COM (e.g. COM7): ")
if(bluetoothCOM == None or bluetoothCOM == ''): bluetoothCOM = 'COM7'
```

```

print(f'\n-----\nCONFIGURATION\n-----\nIP: {mqttIp}\nPORT: {mqttPort}\nBT COM: {bluetoothCOM}')

def on_connect(client, userdata, flags, rc):
    print("Connected to " + str(rc))

def on_message(client, userdata, msg):
    print(msg.topic+" "+str(msg.payload))

client = mqtt.Client()
client.on_connect = on_connect
client.on_message = on_message
print("Connecting to MQTT")
for x in range(7):
    print(".")
    time.sleep(0.7)
client.connect(mqttIp, mqttPort, 60)

print("Connecting to serial: " + bluetoothCOM)
time.sleep(1)
try:
    ser = serial.Serial(bluetoothCOM, 9600)
    print("Bluetooth COM opened")
except:
    exit(1)

while True:
    client.loop()
    cc=str(ser.readline())
    #cc = cc[6:][:-3]
    firstSplitIndex = cc.find('{')
    secondSplitIndex = cc.rfind('}')
    cc = cc[firstSplitIndex: secondSplitIndex+1]
    #print(cc)

    try:
        jDict = json.loads(cc)
        #print(jDict)
        groupName = list(jDict.keys())[0]
        #print(groupName)
        deviceId = list(jDict[groupName])[0]
        #print(deviceId)
        print(f'DeviceID: {deviceId} -> {jDict[groupName][deviceId]}')
        for key, val in jDict[groupName][deviceId].items():
            print(f'{groupName}/{deviceId}/{key} -> {val}')
            client.publish(f'{groupName}/{deviceId}/{key}', val.encode("UTF-8"))
            #client.wait_for_publish()

    except:
        print("Failed to decode: ")
        print(cc)


client.loop_forever()

```

```
ser.close()
```

For the above script to work, we must install 2 libraries.

Open **Powershell as Administrator**.

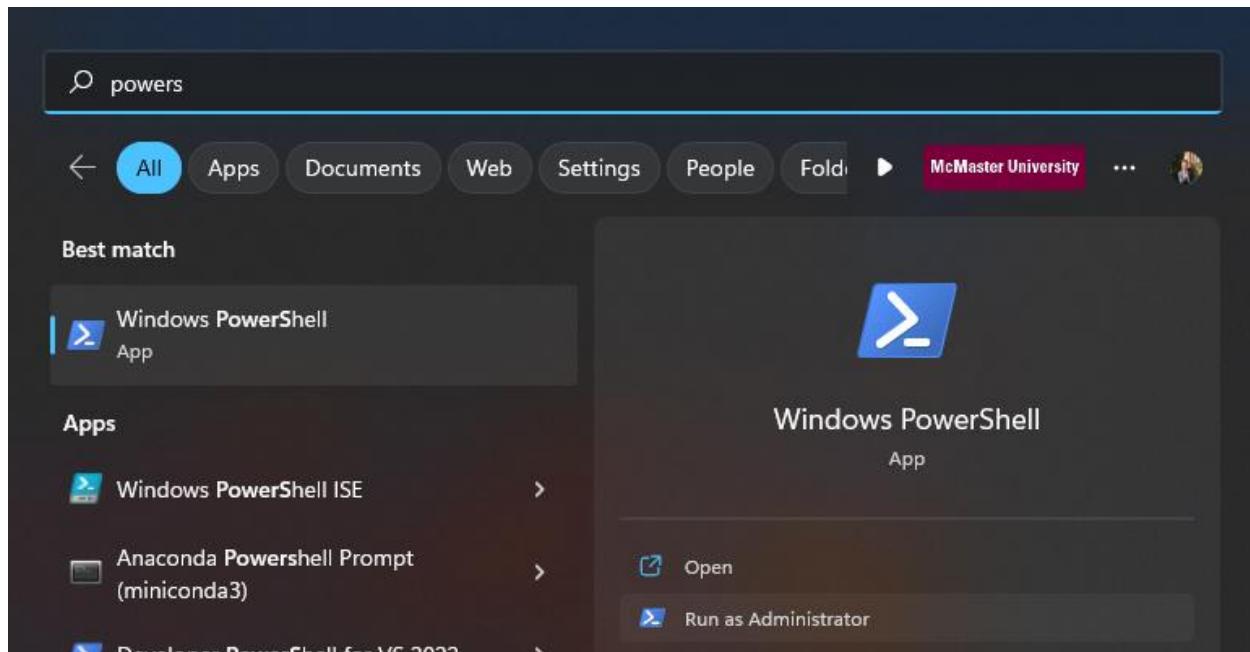

Run the following two commands:


```
pip install pyserial
```

```
pip install paho-mqtt
```

```
Administrator: Windows PowerShell
PS C:\Windows\system32> pip install pyserial
Collecting pyserial
  Using cached pyserial-3.5-py2.py3-none-any.whl (90 kB)
Installing collected packages: pyserial
Successfully installed pyserial-3.5
PS C:\Windows\system32> pip install paho-mqtt
Collecting paho-mqtt
  Using cached paho-mqtt-1.6.1.tar.gz (99 kB)
  Preparing metadata (setup.py) ... done
Installing collected packages: paho-mqtt
  DEPRECATION: paho-mqtt is being installed using the legacy 'setup.py install' method, because it does not have a 'pyproject.toml' and the 'wheel' package is not installed. pip 23.1 will enforce this behaviour change. A possible replacement is to enable the '--use-pep517' option. Discussion can be found at https://github.com/pypa/pip/issues/8559
    Running setup.py install for paho-mqtt ... done
Successfully installed paho-mqtt-1.6.1
PS C:\Windows\system32>
```

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


Within VSCode, navigate to **Terminal > New Terminal**.

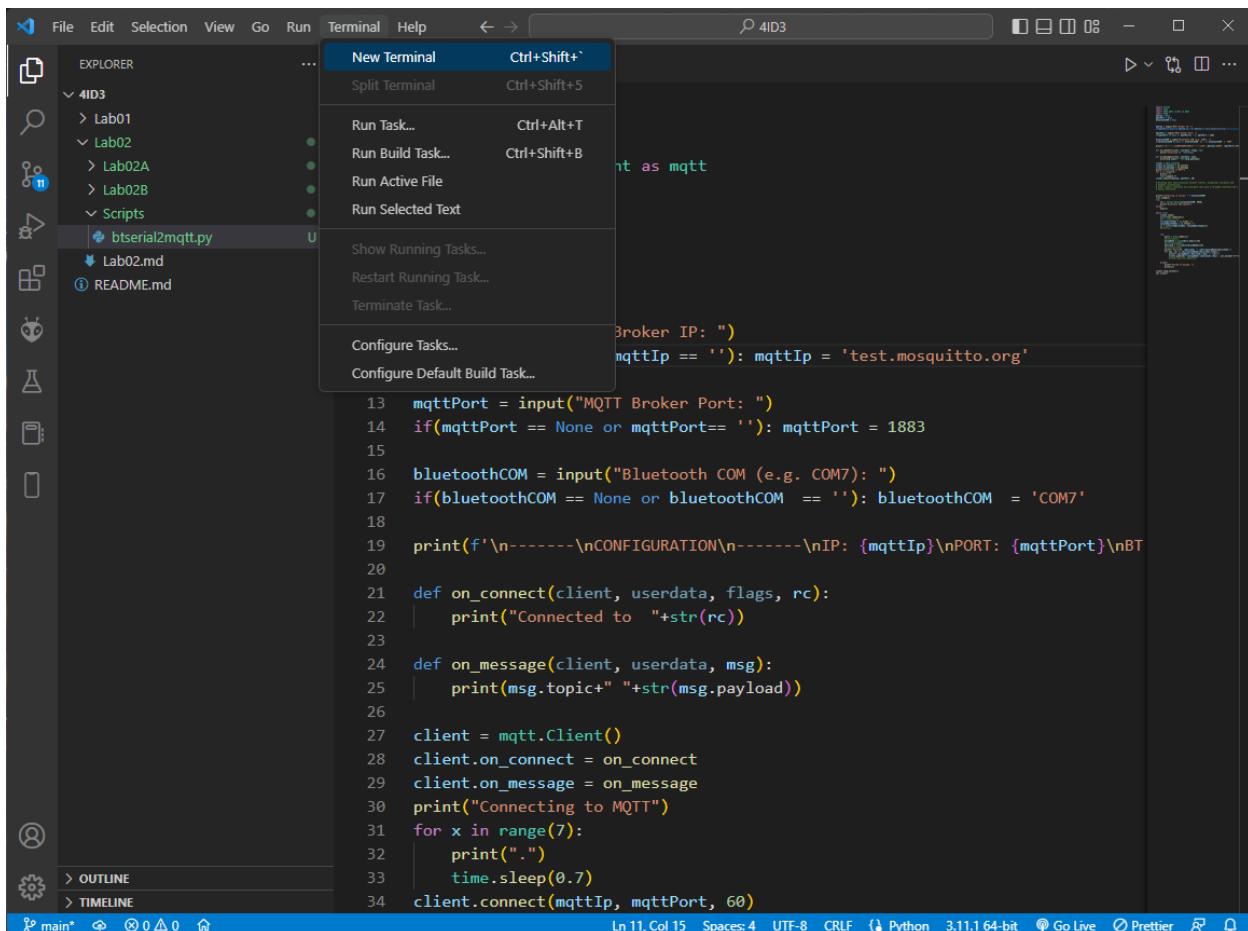

A new Powershell terminal window will open inside VSCode.

Navigate to your **Lab02/Scripts/** directory.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

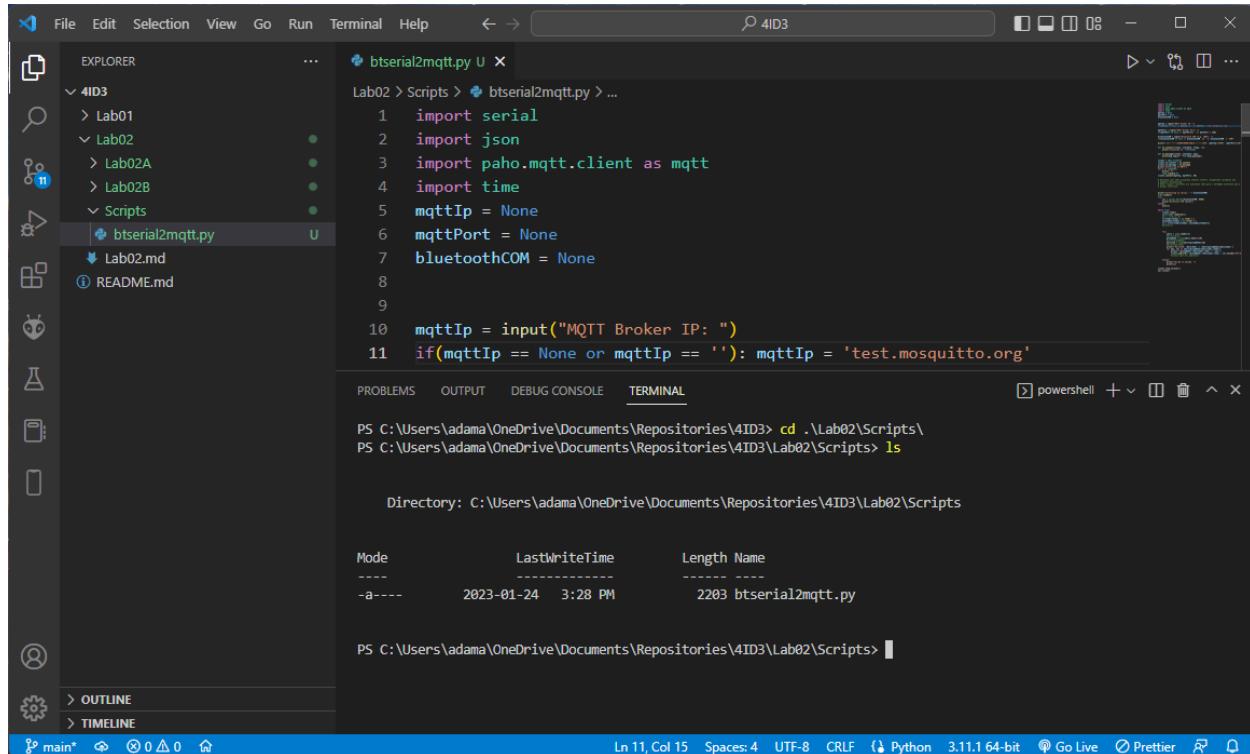

The screenshot shows the Visual Studio Code interface. The Explorer sidebar on the left lists a repository structure under '4ID3' with 'Lab02' expanded, showing files like 'btserial2mqtt.py', 'Lab02.md', and 'README.md'. The 'TERMINAL' tab is active at the bottom, displaying the command-line output of the Python script. The code in 'btserial2mqtt.py' imports serial, json, paho.mqtt.client, and time modules, and defines MQTT broker IP, port, and Bluetooth COM settings. It also includes an input prompt for MQTT Broker IP and a default value of 'test.mosquitto.org'. The terminal shows the script being run from a PowerShell window, listing the file 'btserial2mqtt.py' in the current directory, and then prompting for configuration parameters: MQTT Broker IP, Port, and BT COM.

```
File Edit Selection View Go Run Terminal Help ⏪ → 🔍 4ID3
EXPLORER ... btserial2mqtt.py U x
Lab02 > Scripts > btserial2mqtt.py ...
1 import serial
2 import json
3 import paho.mqtt.client as mqtt
4 import time
5 mqttIp = None
6 mqttPort = None
7 bluetoothCOM = None
8
9
10 mqttIp = input("MQTT Broker IP: ")
11 if(mqttIp == None or mqttIp == ''): mqttIp = 'test.mosquitto.org'

PROBLEMS OUTPUT DEBUG CONSOLE TERMINAL
powershell + v 🗑️ ^ x
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3> cd .\Lab02\Scripts
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts> ls

Directory: C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts


Mode LastWriteTime Length Name
---- ----- ----- ----
-a--- 2023-01-24 3:28 PM 2203 btserial2mqtt.py

PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts>

Ln 11, Col 15 Spaces: 4 UTF-8 CRLF Python 3.11.1 64-bit Go Live Prettier 🕒
```

To launch the python application, run the following command:

```
python ./btserial2mqtt.py
```

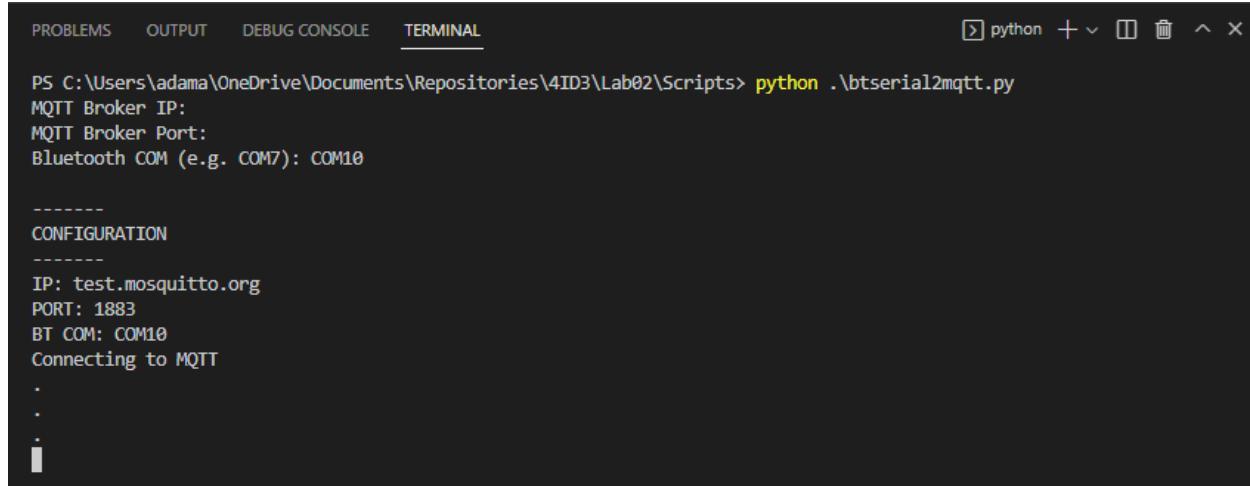

The screenshot shows the terminal window of VS Code. The command 'python ./btserial2mqtt.py' is entered and executed. The script prompts for MQTT Broker IP, Port, and BT COM. It then prints configuration details: IP: test.mosquitto.org, PORT: 1883, BT COM: COM10. It also indicates it is connecting to MQTT. The terminal shows the command-line interface with user input and script output.

```
PROBLEMS OUTPUT DEBUG CONSOLE TERMINAL
python + v 🗑️ ^ x
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts> python ./btserial2mqtt.py
MQTT Broker IP:
MQTT Broker Port:
Bluetooth COM (e.g. COM7): COM10

-----
CONFIGURATION
-----
IP: test.mosquitto.org
PORT: 1883
BT COM: COM10
Connecting to MQTT
.
```

Fill in the prompted information. Press **enter** to use test.mosquitto.org defaults.


Ensure that your MacIoT board is still transmitting. Press **RESET** to restart it. Wait 10 seconds.

**ENSURE THAT NO OTHER BLUETOOTH SERIAL MONITORS ARE OPEN, BLOCKING THE PORT.**

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

Run `btserial2mqtt.py` using the following command:

```
Python ./btserial2mqtt.py
```

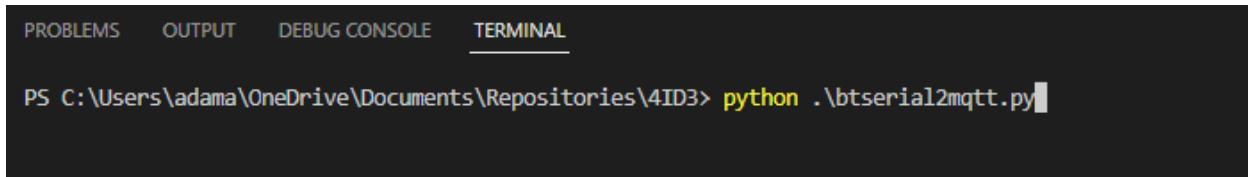

A screenshot of a terminal window in a dark-themed code editor. The tabs at the top are labeled PROBLEMS, OUTPUT, DEBUG CONSOLE, and TERMINAL, with TERMINAL underlined. The terminal output shows the command `python ./btserial2mqtt.py` being entered.




A screenshot of a terminal window in a dark-themed code editor. The tabs at the top are labeled PROBLEMS, OUTPUT, DEBUG CONSOLE, and TERMINAL, with TERMINAL underlined. The terminal output shows the program connecting to MQTT and serial ports, and publishing sensor data to MQTT topics. The data transmitted is:

```
IP: test.mosquitto.org
PORT: 1883
BT COM: COM10
Connecting to MQTT
.
.
.
.
.
.
Connecting to serial: COM10
Bluetooth COM opened: Serial<id=0x282fdb5f370, open=True>(port='COM10', baudrate=9600, bytesize=8, parity='N', stopbits=1, timeout=None, xonxoff=False, rtscts=False, dsrdtr=False)
Connected to 0
DeviceID: DeviceA -> {'Temp': '17.83', 'Luminosity': '66.75'}
GroupA/DeviceA/Temp -> 17.83
GroupA/DeviceA/Luminosity -> 66.75
```

### Verify MQTT

Use the MQTT application on your phone or the Mosquitto MQTT client installed previously to verify that data is being transmitted to the correct paths.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

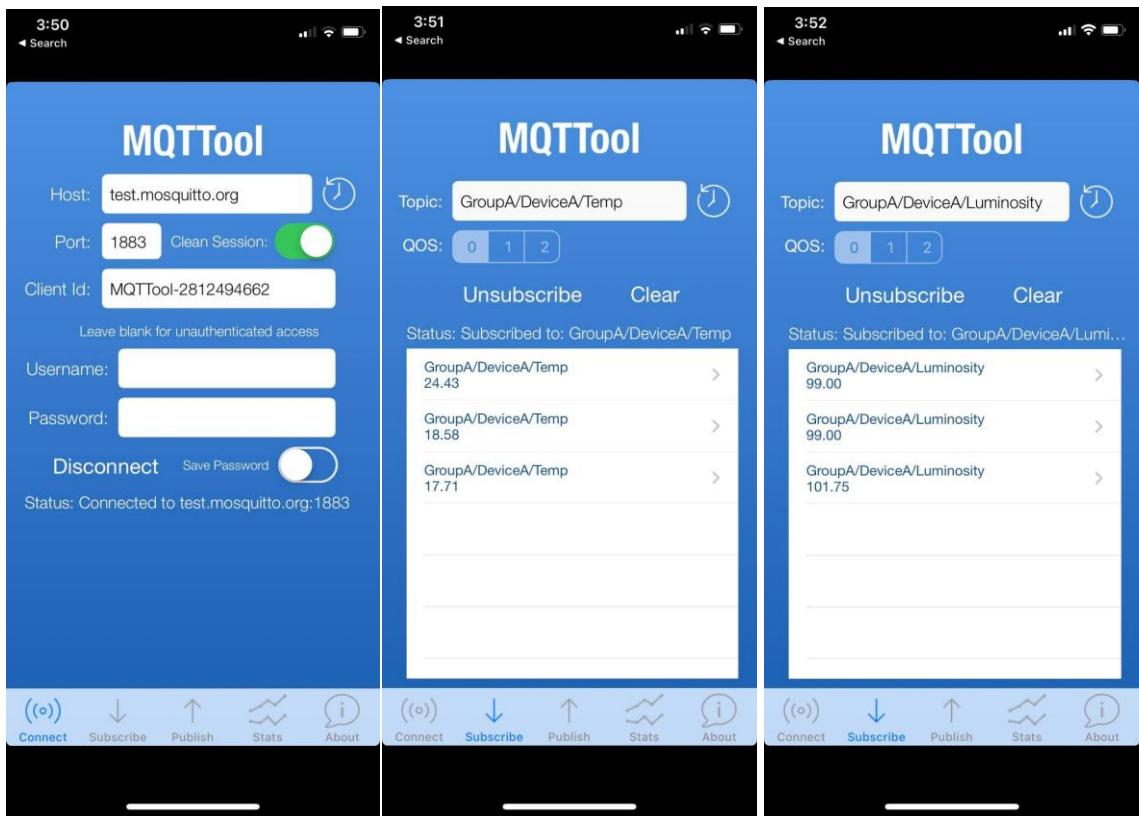

```
PS C:\Program Files\mosquitto> .\mosquitto_sub.exe -h test.mosquitto.org -t "GroupA/DeviceA/Temp"
15.56
15.52
15.48
15.44
15.36
```


### Exercise B

Now that data is being transmitted to MQTT, using knowledge from previous labs, set up a **NodeRED** flow to **read** this data from the public MQTT broker and **visualize** it.

### Exiting the Python Application

Press **CTRL + C** to exit the Python application.

*Lab 2 - Communicating Sensor Data over a Bluetooth Network*

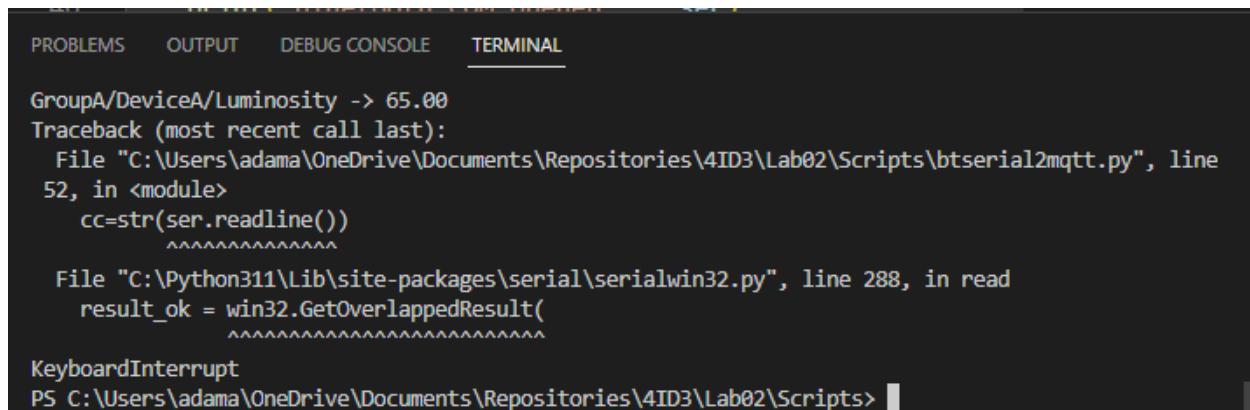

The screenshot shows a terminal window with the following text output:

```
PROBLEMS    OUTPUT    DEBUG CONSOLE    TERMINAL

GroupA/DeviceA/Luminosity -> 65.00
Traceback (most recent call last):
  File "C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts\btserial2mqtt.py", line
52, in <module>
    cc=str(ser.readline())
    ~~~~~
  File "C:\Python311\Lib\site-packages\serial\serialwin32.py", line 288, in read
    result_ok = win32.GetOverlappedResult(
    ~~~~~
KeyboardInterrupt
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts>
```

## *Optional: Connecting to a Database*

Navigate to the following URL and download **MongoDB Community**.

<https://www.mongodb.com/try/download/community-kubernetes-operator>




Run the installer using default settings. It will say **This may contain malicious software**. Ignore this warning, this software is very reputable, the packaging format is just out-of-date.




Perform a **Complete** installation.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


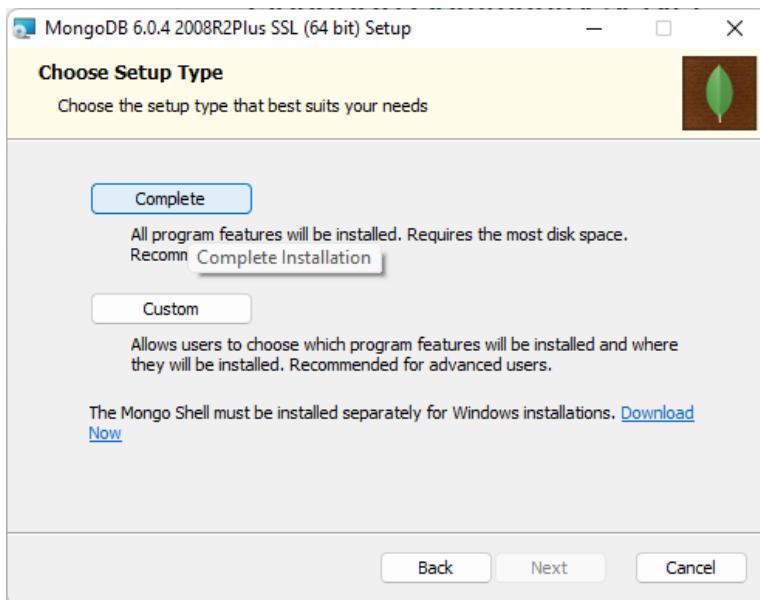


Leave **Service Configuration** as default.

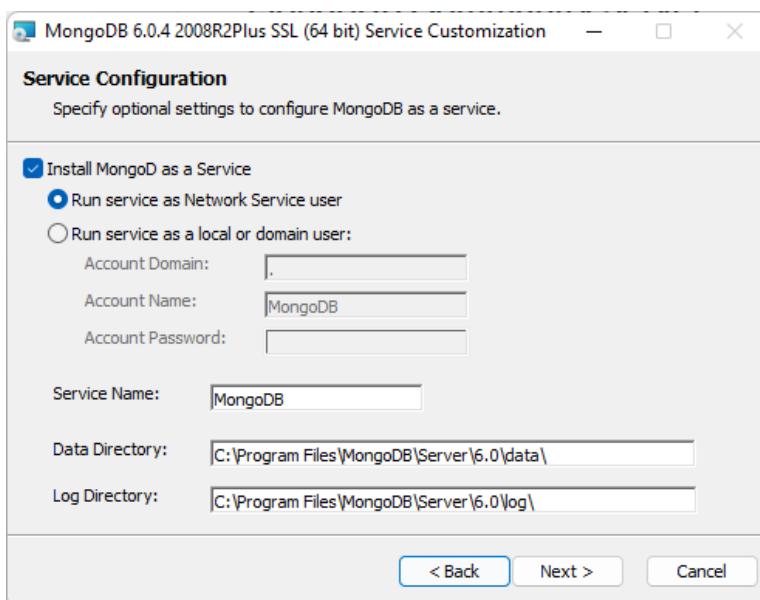


Ensure that **Install MongoDB Compass** is checked.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

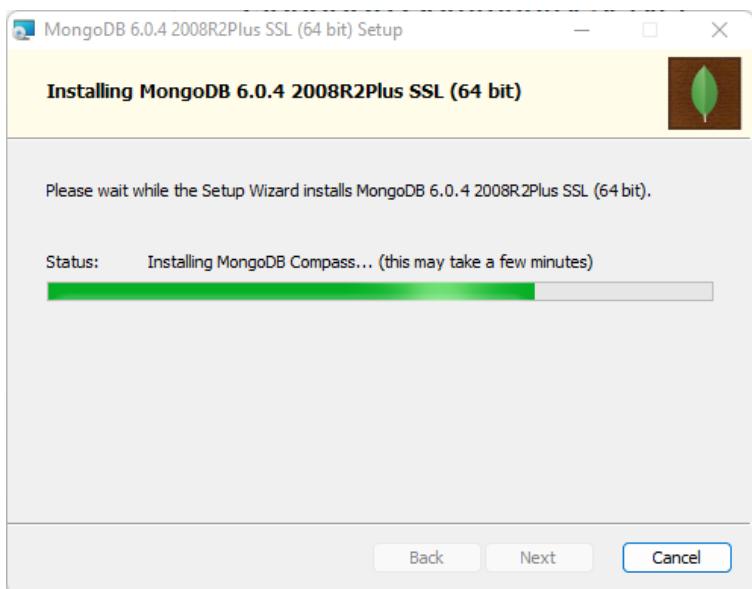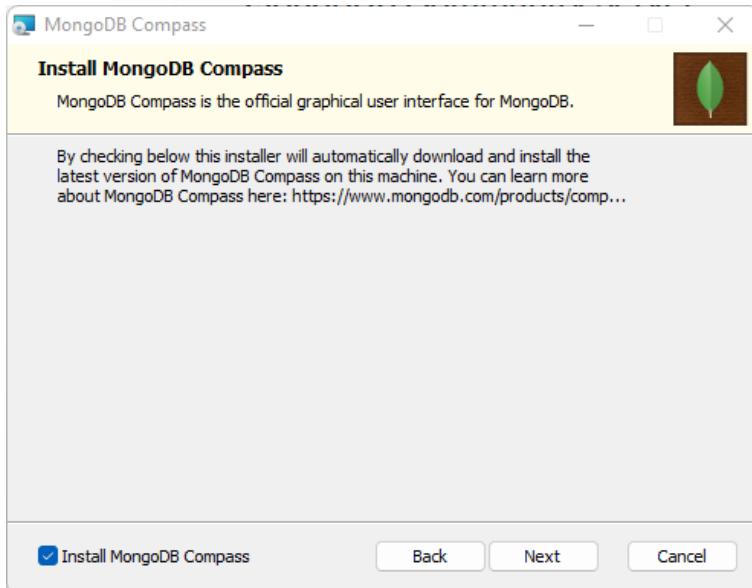

Launch **MongoDB Compass**.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

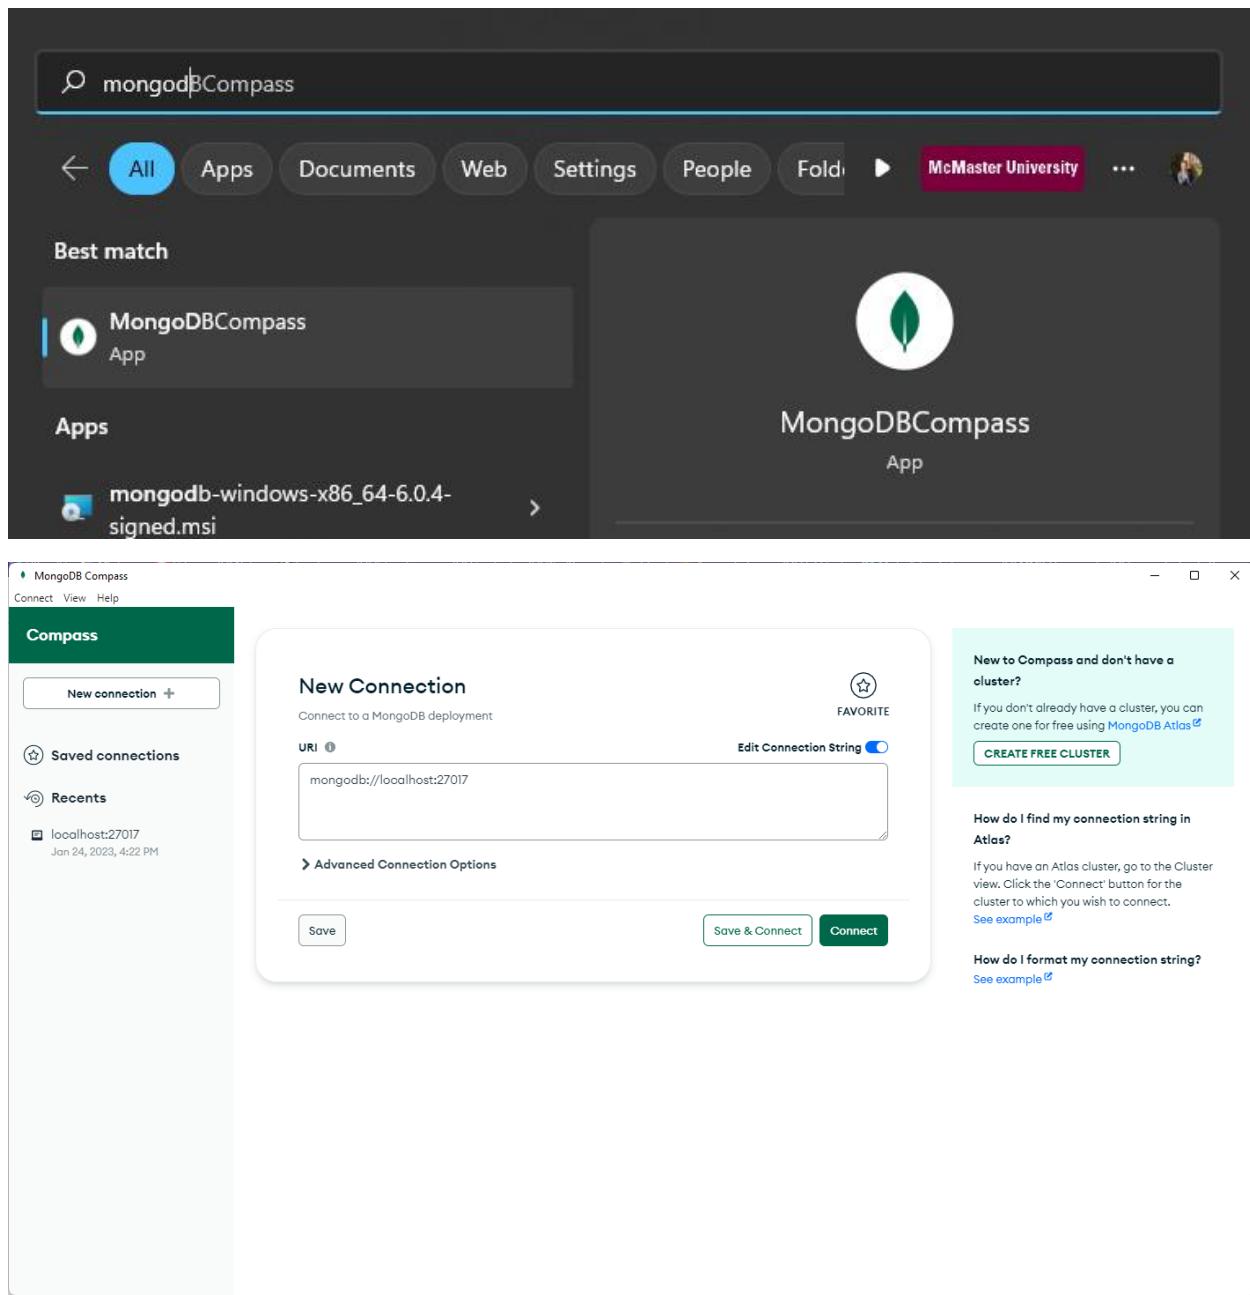


Press **Connect**.

**Save & Connect**    **Connect**

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

Navigate back to **VSCode** and create a **new Python script** in the **Scripts/** folder named **btserial2mongodb.**

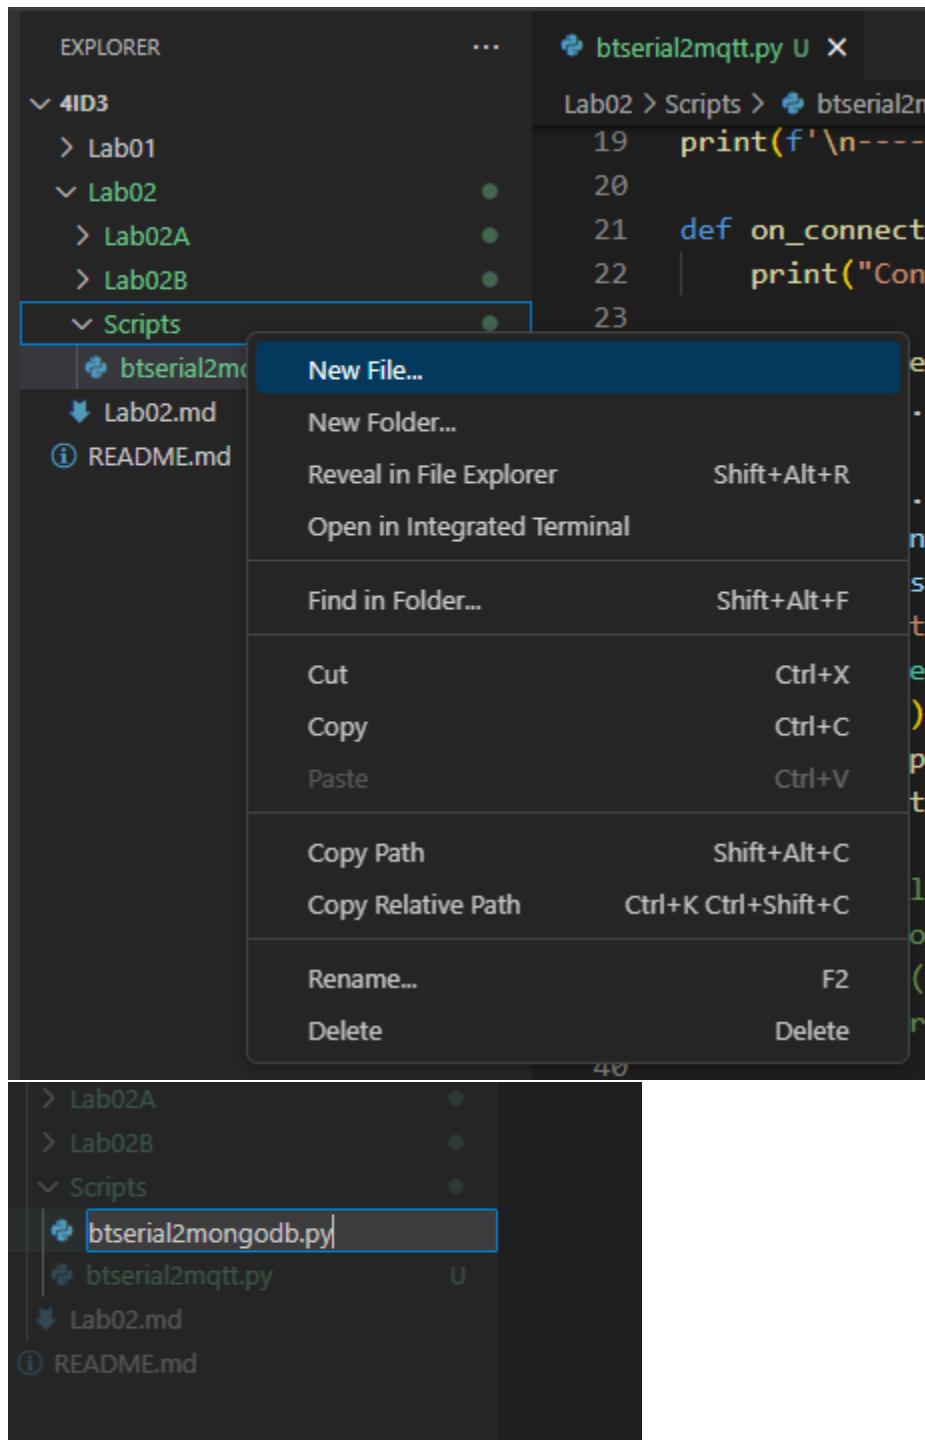


Using **Powershell as Administrator**, install the following dependencies using **pip package manager**.

```
pip install pyserial
```

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

*pip install pymongo*

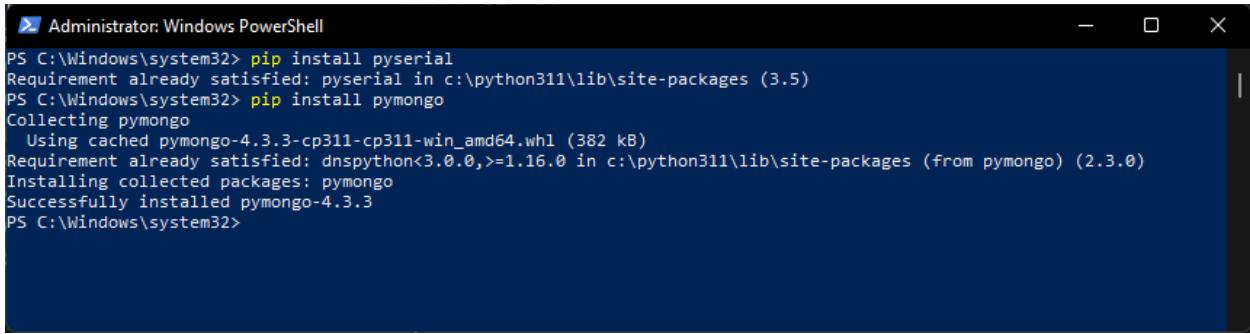

```
Administrator: Windows PowerShell
PS C:\Windows\system32> pip install pyserial
Requirement already satisfied: pyserial in c:\python311\lib\site-packages (3.5)
PS C:\Windows\system32> pip install pymongo
Collecting pymongo
  Using cached pymongo-4.3.3-cp311-cp311-win_amd64.whl (382 kB)
Requirement already satisfied: dnspython<3.0.0,>=1.16.0 in c:\python311\lib\site-packages (from pymongo) (2.3.0)
Installing collected packages: pymongo
Successfully installed pymongo-4.3.3
PS C:\Windows\system32>
```

Paste the following Python script into the blank python file:

```
import serial
import json
import time
import pymongo

myclient = pymongo.MongoClient("mongodb://localhost:27017/")

bluetoothCOM = None

bluetoothCOM = input("Bluetooth COM (e.g. COM7): ")
if(bluetoothCOM == None or bluetoothCOM == ''): bluetoothCOM = 'COM7'
print(f'\n-----\nCONFIGURATION\n-----\nIP: {mqttIp}\nPORT: {mqttPort}\nBT COM: {bluetoothCOM}')

print("Connecting to serial: " + bluetoothCOM)
time.sleep(1)
try:
    ser = serial.Serial(bluetoothCOM, 9600)
    print("Bluetooth COM opened")
except:
    exit(1)

while True:

    cc=str(ser.readline())
    #cc = cc[6:][:-3]
    firstSplitIndex = cc.find('{')
    secondSplitIndex = cc.rfind('}')
    cc = cc[firstSplitIndex:secondSplitIndex+1]

    try:
        jDict = json.loads(cc)
        #print(jDict)
        groupName = list(jDict.keys())[0]
        deviceId = list(jDict[groupName])[0]
        #print(f'DeviceID: {deviceId} -> {jDict[deviceId]}')

        mydb = myclient[groupName]
        mycollection = mydb[deviceId]

        dbDict = dict({})
        for key, val in jDict[groupName][deviceId].items():

            dbDict[key] = val
```


## Lab 2 - Communicating Sensor Data over a Bluetooth Network

```
dbDict[key] = val

ret = mycollection.insert_one(dbDict)
print("Inserted successfully")


except:
    print("Failed to decode: ")
    print(cc)

ser.close()
```

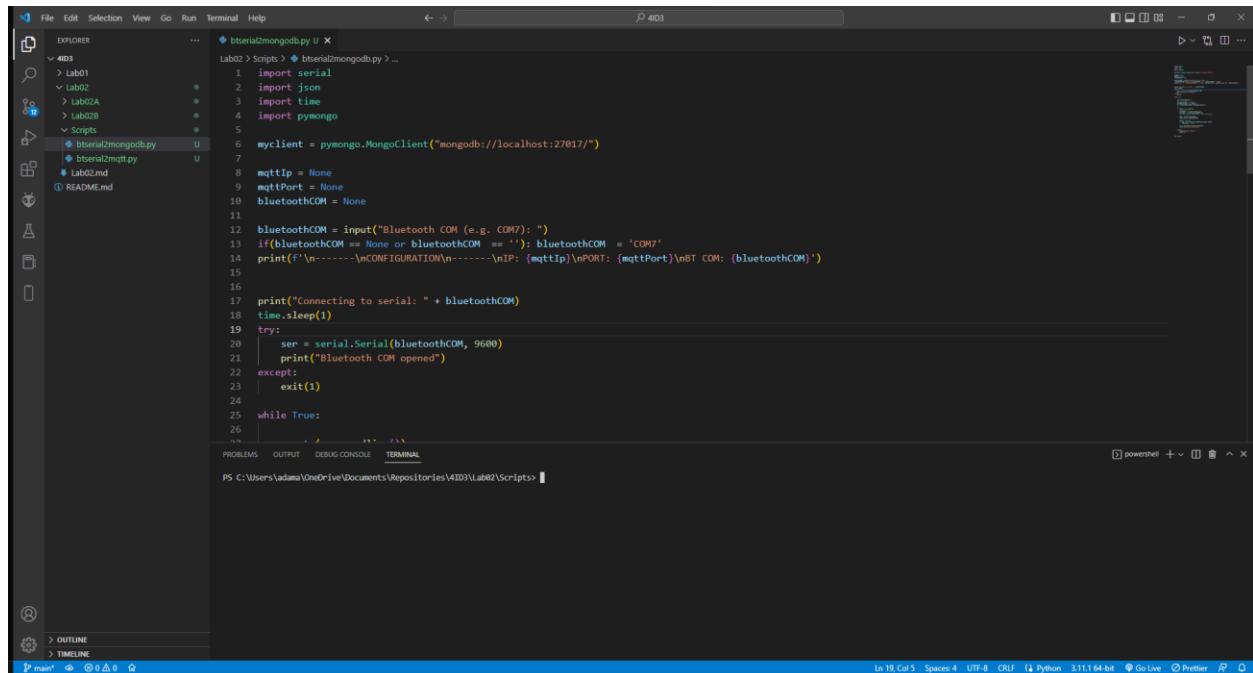

```
File Edit Selection View Go Run Terminal Help
EXPLORER ... btserial2mongodb.py U
Lab02 > Scripts > btserial2mongodb.py > ...
1 import serial
2 import json
3 import time
4 import pymongo
5
6 myclient = pymongo.MongoClient("mongodb://localhost:27017/")
7
8 mqttIp = None
9 mqttPort = None
10 bluetoothCOM = None
11
12 bluetoothCOM = input("Bluetooth COM (e.g. COM2): ")
13 if(bluetoothCOM == None or bluetoothCOM == ''): bluetoothCOM = 'COM7'
14 print(f"\n-----\nCONFIGURATION\n-----\nIP: {mqttIp}\nPORT: {mqttPort}\nCOM: {bluetoothCOM}\n")
15
16 print("Connecting to serial: " + bluetoothCOM)
17 time.sleep(1)
18 try:
19     ser = serial.Serial(bluetoothCOM, 9600)
20     print("Bluetooth COM opened")
21 except:
22     exit(1)
23
24 while True:
25
PROBLEMS OUTPUT DEBUG CONSOLE TERMINAL
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts>
```

Run the python program while the MacIoT board is connected with Bluetooth and transmitting data.

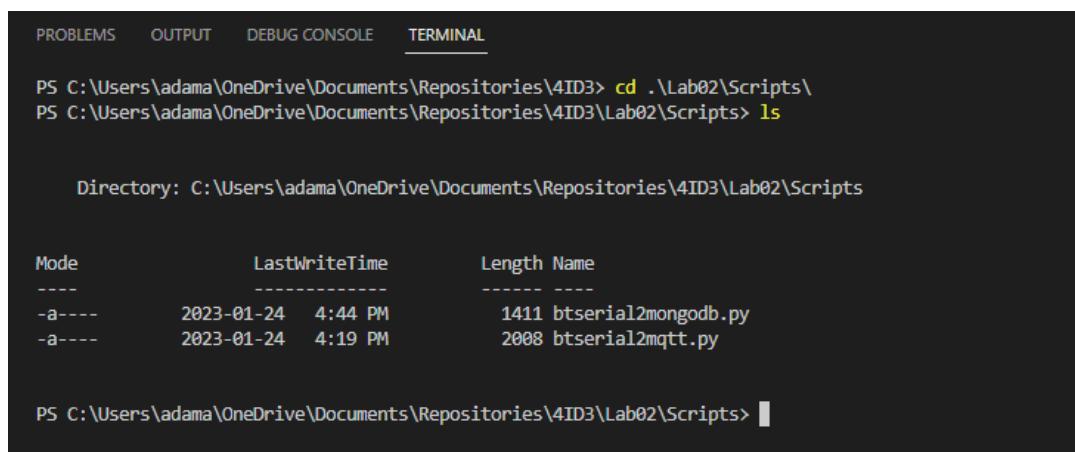

```
PROBLEMS OUTPUT DEBUG CONSOLE TERMINAL
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3> cd .\Lab02\Scripts\>
PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts> ls

Directory: C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts

Mode                LastWriteTime        Length Name
----                -----          ---- -
-a--- 2023-01-24 4:44 PM           1411 btserial2mongodb.py
-a--- 2023-01-24 4:19 PM            2008 btserial2mqtt.py

PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts>
```

## Lab 2 - Communicating Sensor Data over a Bluetooth Network


```
PROBLEMS OUTPUT DEBUG CONSOLE TERMINAL

PS C:\Users\adama\OneDrive\Documents\Repositories\4ID3\Lab02\Scripts> python .\btserial2mongodb.py
Bluetooth COM (e.g. COM7): COM10

-----
CONFIGURATION
-----
IP: None
PORT: None
BT COM: COM10
Connecting to serial: COM10
Bluetooth COM opened
Inserted successfully
Inserted successfully
Inserted successfully
```

If the data is being parsed correctly and it can access the MongoDB database, then **Inserted Successfully** should be printed.

Reload your MongoDB Compass client:

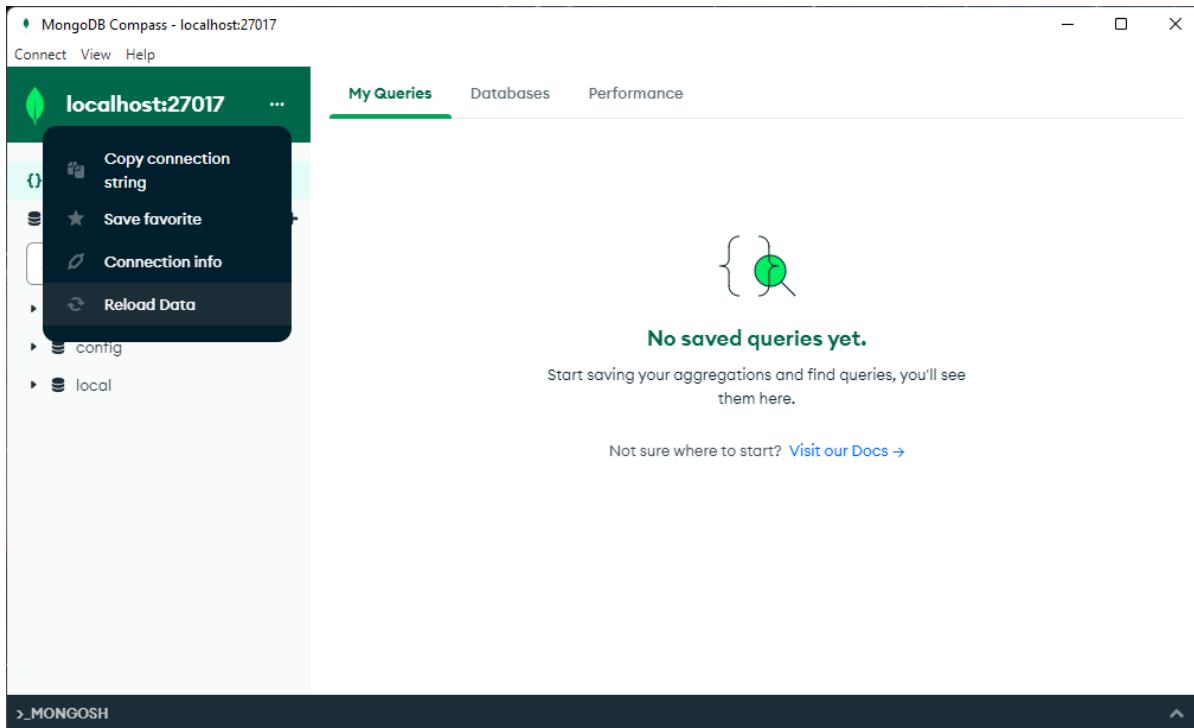

Observe that a new database has been generated. Open this database.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

The screenshot shows the MongoDB Compass interface. At the top, there's a header with the title 'My Queries'. Below it, a 'Databases' section with a '+' button. A search bar is present. Under 'My Queries', there's a group named 'GroupA' indicated by a right-pointing arrow and a database icon.

You should see all of your data being inserted.

The screenshot shows the MongoDB Compass interface for the 'GroupA.DeviceA' collection. The top navigation bar shows 'localhost:27017' and the collection name 'GroupA.DeviceA'. On the left, the sidebar shows 'My Queries', 'Databases', and a selected 'DeviceA' under 'GroupA'. The main area shows '20 DOCUMENTS' and '1 INDEXES'. A 'Documents' tab is selected. A 'Filter' bar with a query '{ field: 'value' }' and a 'Find' button. Below are five document preview cards, each showing an '\_id' (ObjectId), 'Temp' (e.g., "11.41"), and 'Luminosity' (e.g., "13.25").


_id	Temp	Luminosity
ObjectId('63d051906f6c3bfc0eaf9c42')	"11.41"	"13.25"
ObjectId('63d051956f6c3bfc0eaf9c43')	"11.46"	"13.25"
ObjectId('63d0519b6f6c3bfc0eaf9c44')	"11.50"	"13.50"
ObjectId('63d051a16f6c3bfc0eaf9c45')	"11.51"	"13.50"
ObjectId('63d051a76f6c3bfc0eaf9c46')	"11.52"	"13.50"

### Optional: Exercise C

Collect sensor data for 2 minutes then export the dataset from the database. Using excel or another spreadsheet software, graph the data and identify temperature and light intensity trends. Include the graphs with your lab submission.

## Pushing Changes to GitHub

Open **git bash** in your local repository.

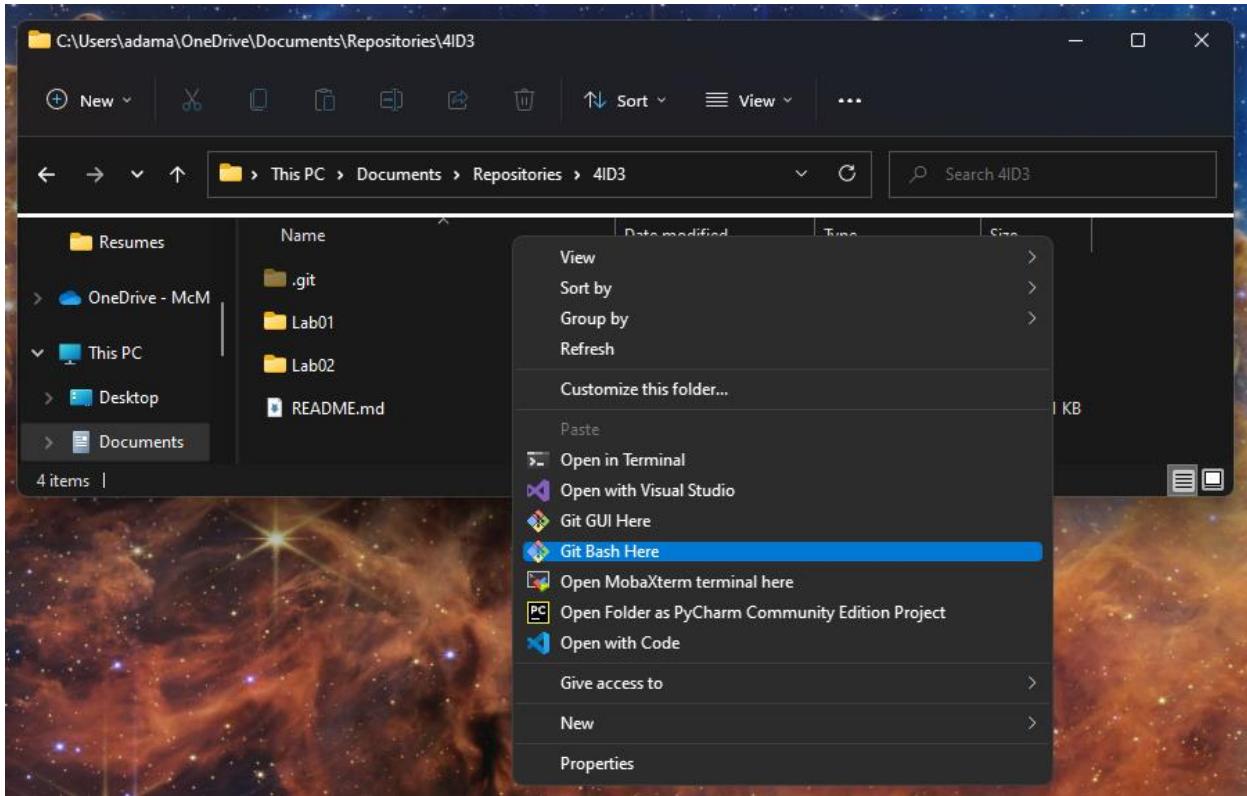

Add and commit your changes.

## Lab 2 - Communicating Sensor Data over a Bluetooth Network

C:\Users\adama\OneDrive\Documents\Repositories\4ID3

Name

Resumes .git Lab01 Lab02 README.md

```
MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3
adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ git add .
warning: in the working copy of 'Lab02/Lab02A/debug.cfg', LF will be replaced by
CRLF the next time Git touches it
warning: in the working copy of 'Lab02/Lab02A/debug_custom.json', LF will be rep
laced by CRLF the next time Git touches it
warning: in the working copy of 'Lab02/Lab02A/esp32.svd', LF will be replaced by
CRLF the next time Git touches it
warning: in the working copy of 'Lab02/Lab02B/debug.cfg', LF will be replaced by
CRLF the next time Git touches it
warning: in the working copy of 'Lab02/Lab02B/debug_custom.json', LF will be rep
laced by CRLF the next time Git touches it
warning: in the working copy of 'Lab02/Lab02B/esp32.svd', LF will be replaced by
CRLF the next time Git touches it

adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ git commit -m "Lab 2"
[main d4cdæ1] Lab 2
14 files changed, 92561 insertions(+)
create mode 100644 Lab02/Lab02A/Lab02A.h
create mode 100644 Lab02/Lab02A/Lab02A.ino
create mode 100644 Lab02/Lab02A/debug.cfg
create mode 100644 Lab02/Lab02A/debug_custom.json
create mode 100644 Lab02/Lab02A/esp32.svd
create mode 100644 Lab02/Lab02B/Lab02B.h
create mode 100644 Lab02/Lab02B/Lab02B.ino
create mode 100644 Lab02/Lab02B/debug.cfg
create mode 100644 Lab02/Lab02B/debug_custom.json
create mode 100644 Lab02/Lab02B/esp32.svd
create mode 100644 Lab02/Scripts/btserial2mongodb.py
create mode 100644 Lab02/Scripts/btserial2mqtt.py
create mode 100644 Lab02/Scripts/example_insertDataToMongoDB.py
create mode 100644 Lab02/Scripts/example_parseMongoDB.py

adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ |
```

Push your changes.

C:\Users\adama\OneDrive\Documents\Repositories\4ID3

Name


Resumes .git Lab01 Lab02 README.md

```
MINGW64:/c/Users/adama/OneDrive/Documents/Repositories/4ID3
adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ git push origin main
Enumerating objects: 19, done.
Counting objects: 100% (19/19), done.
Delta compression using up to 12 threads
Compressing objects: 100% (17/17), done.
Writing objects: 100% (17/17), 98.20 KiB | 5.17 MiB/s, done.
Total 17 (delta 3), reused 0 (delta 0), pack-reused 0
remote: Resolving deltas: 100% (3/3), done.
To github.com:sokacza/4ID3.git
 f3e2866..d4cdæ1 main -> main

adama@DESKTOP-9L3EOVQ MINGW64 ~/OneDrive/Documents/Repositories/4ID3 (main)
$ |
```

## *Lab 2 - Communicating Sensor Data over a Bluetooth Network*

Check that they've been synced correctly.

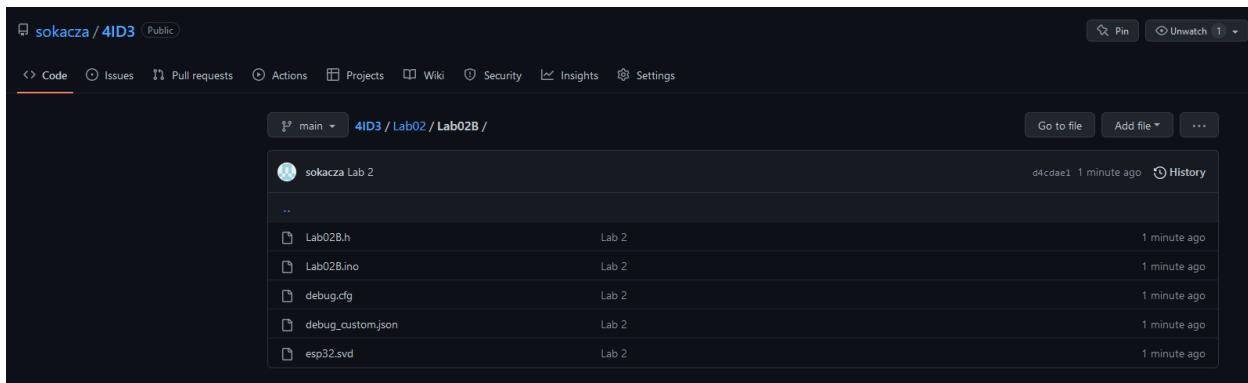

The screenshot shows a GitHub repository page for 'sokacza / 4ID3'. The 'Code' tab is selected. The repository name is '4ID3 / Lab02 / Lab02B /'. The main branch is 'main'. The file list shows five files: 'Lab02B.h', 'Lab02B.ino', 'debug.cfg', 'debug\_customjson', and 'esp32.svd'. All files were last modified 1 minute ago by 'd4ccdae1'. The files are categorized under 'Lab 2'.

File	Type	Last Modified
Lab02B.h	Lab 2	1 minute ago
Lab02B.ino	Lab 2	1 minute ago
debug.cfg	Lab 2	1 minute ago
debug_customjson	Lab 2	1 minute ago
esp32.svd	Lab 2	1 minute ago

---

END